

DEPARTMENT OF THE ARMY SUPPLY CATALOG

LIST OF ALL SERVICE PARTS

WILLYS

 
 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1



MS-Overland-Store



Neiske & Pinn GbR
Sendenhorster Str. 13
D-48324 Sendenhorst/Albersloh
Tel. +49 (0) 2535 931717 Fax +49 (0) 2535 931718
Internet: www.neiske-pinn.de
Email: Info@neiske-pinn.de

TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

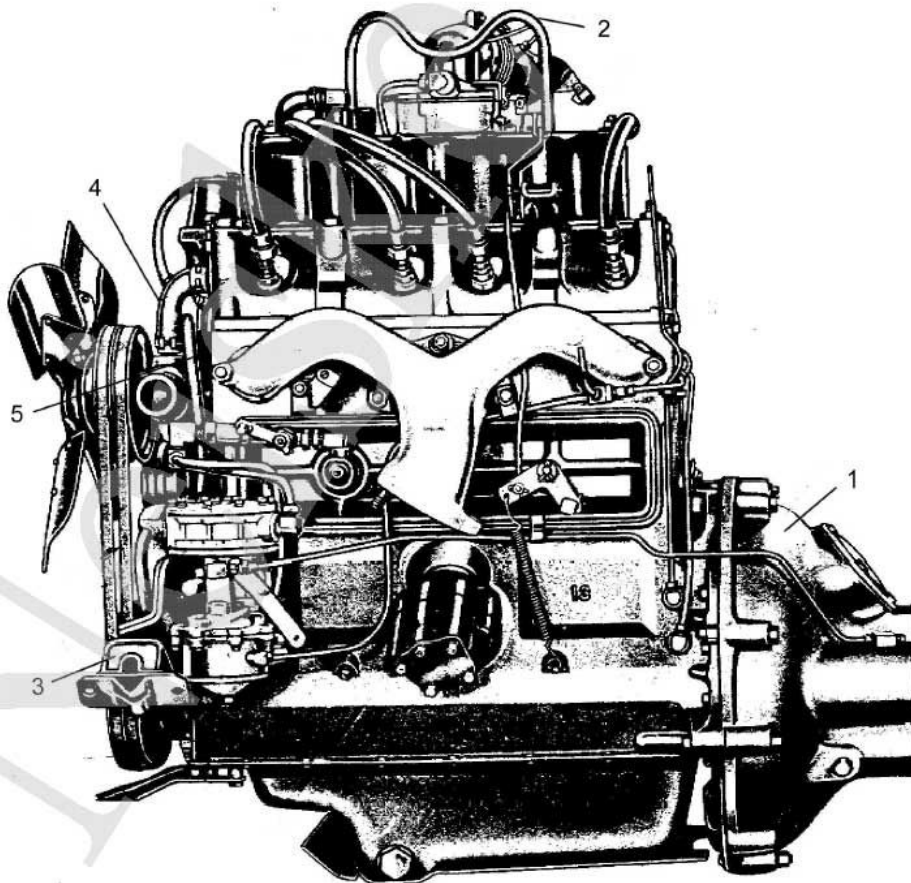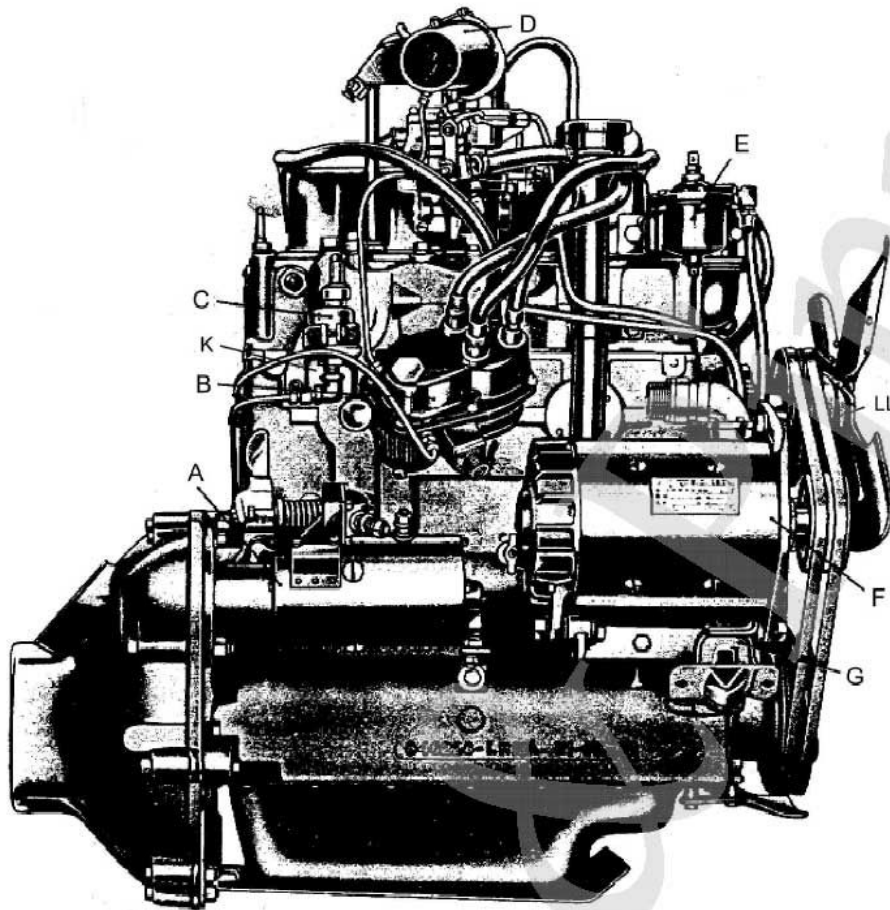


Motor / Engine

  
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

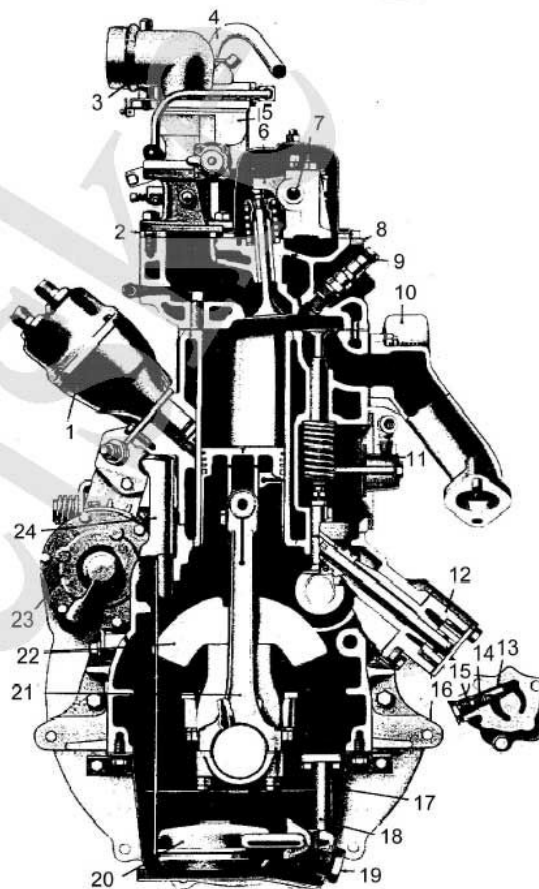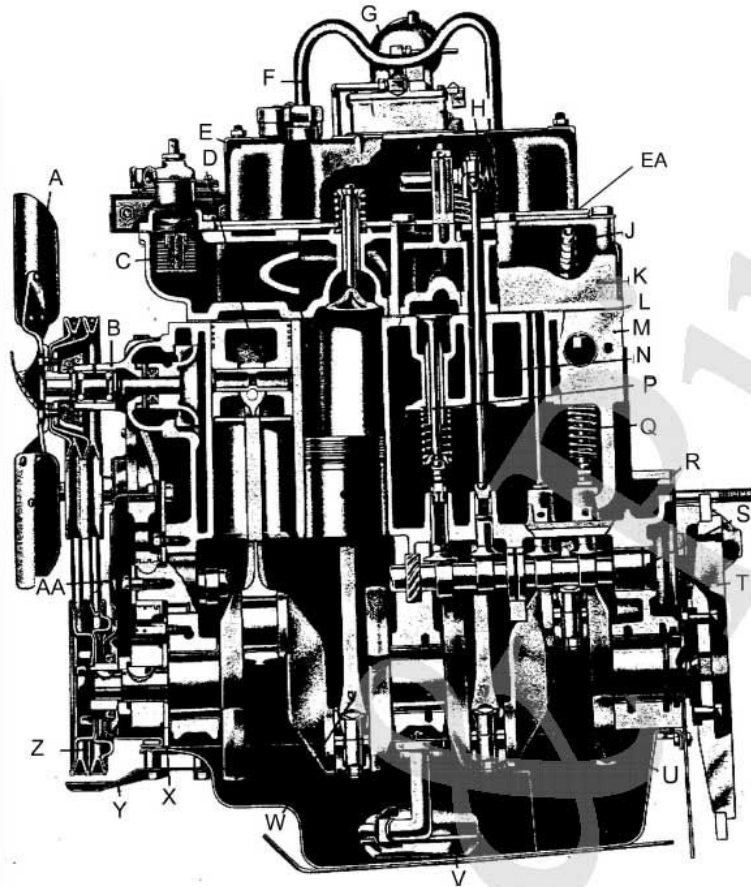


Motor / Engine

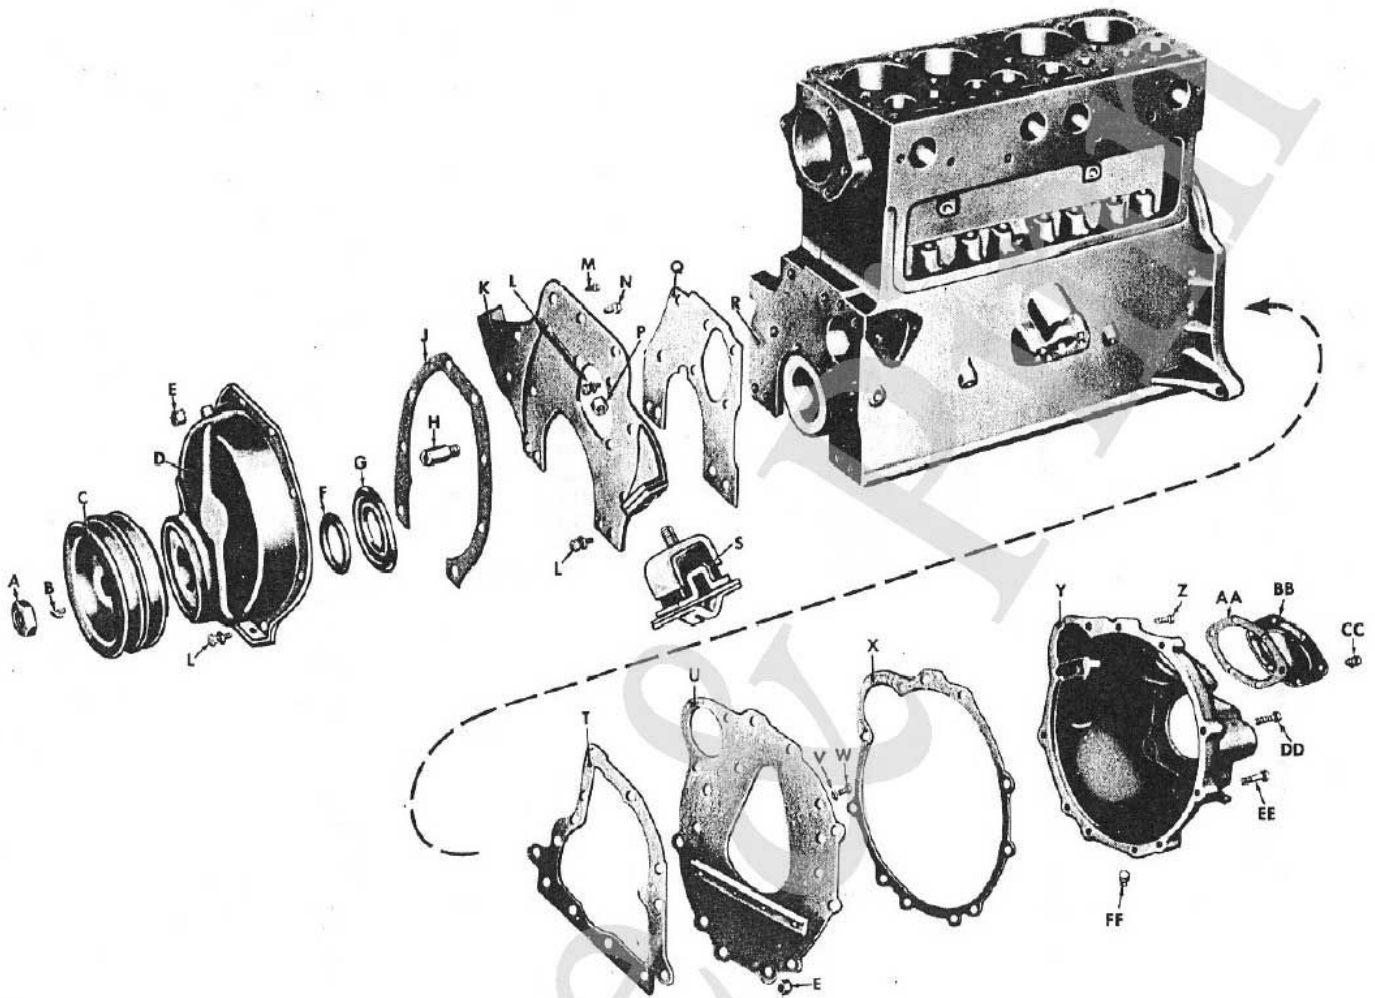 


Motorblock / Engine block

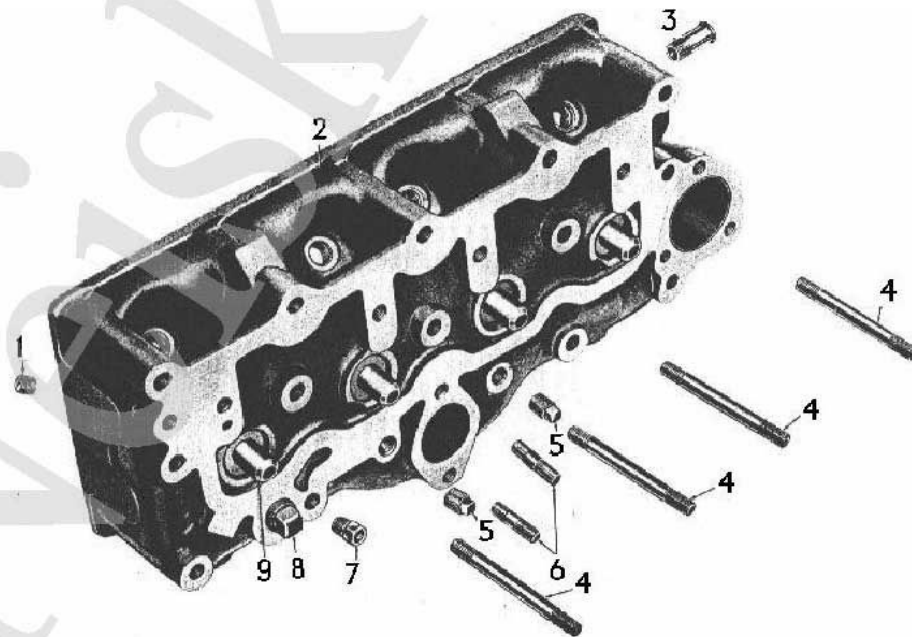 

Zylinderkopf / Cylinder head

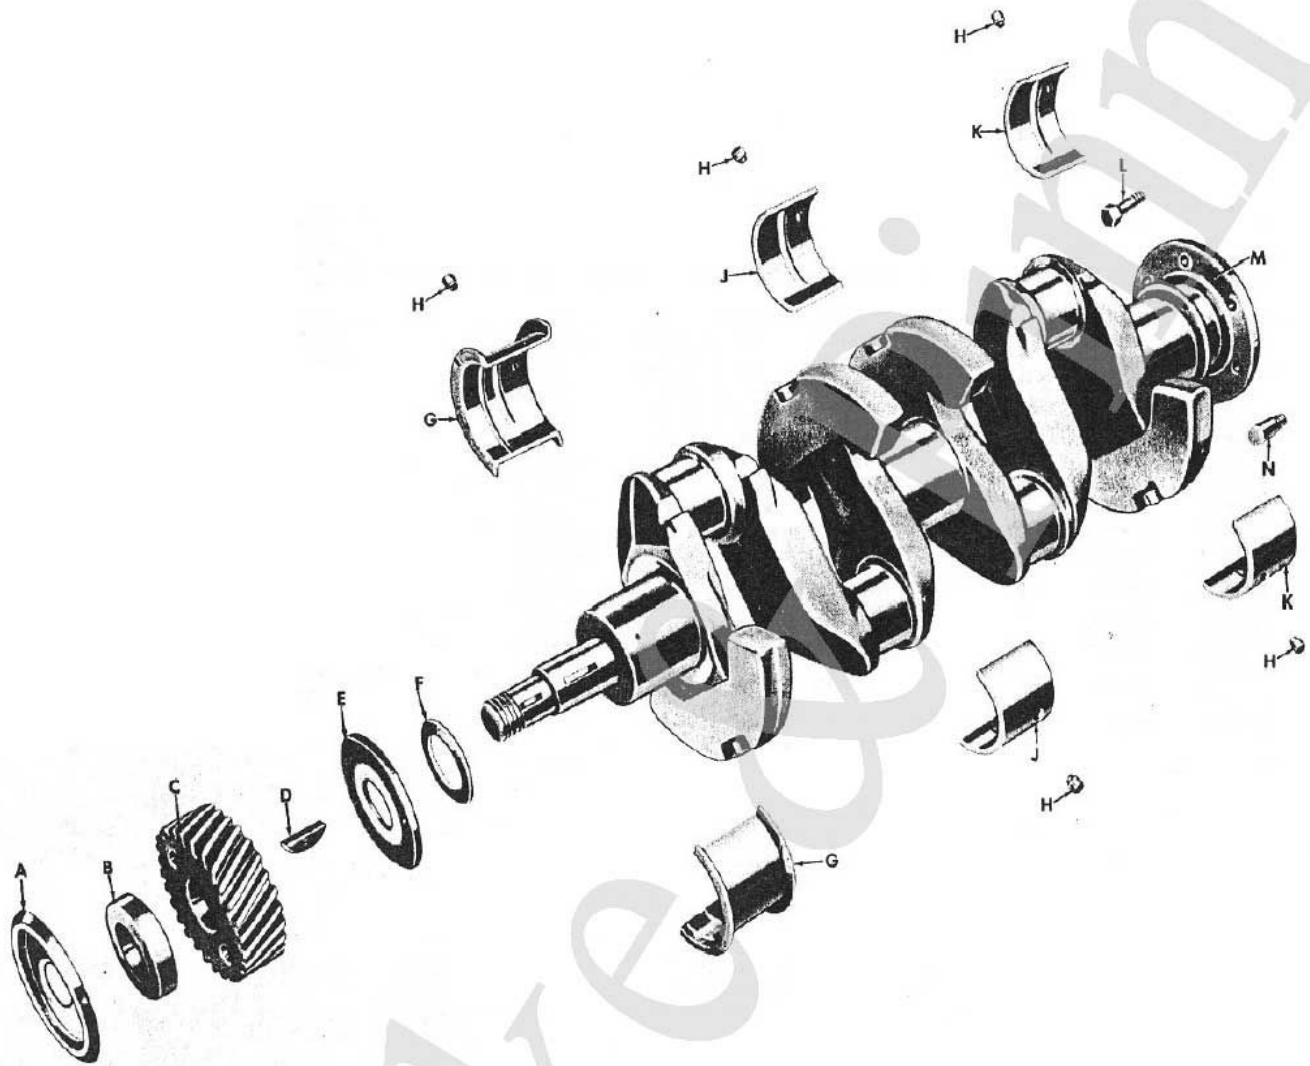 


Kurbelwelle / Crankshaft

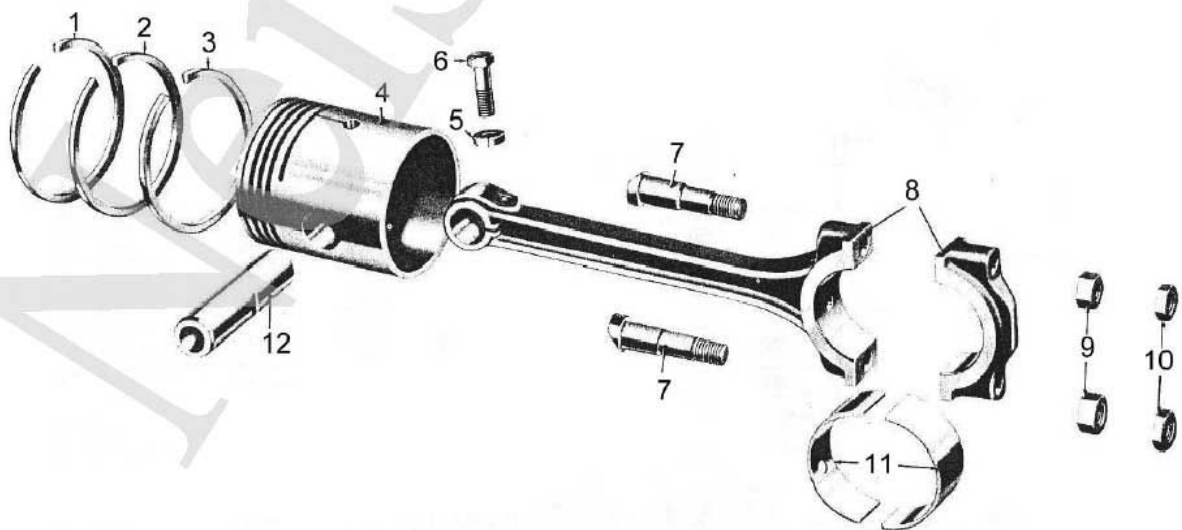 


Kolben & Pleuel / Piston & Rod

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

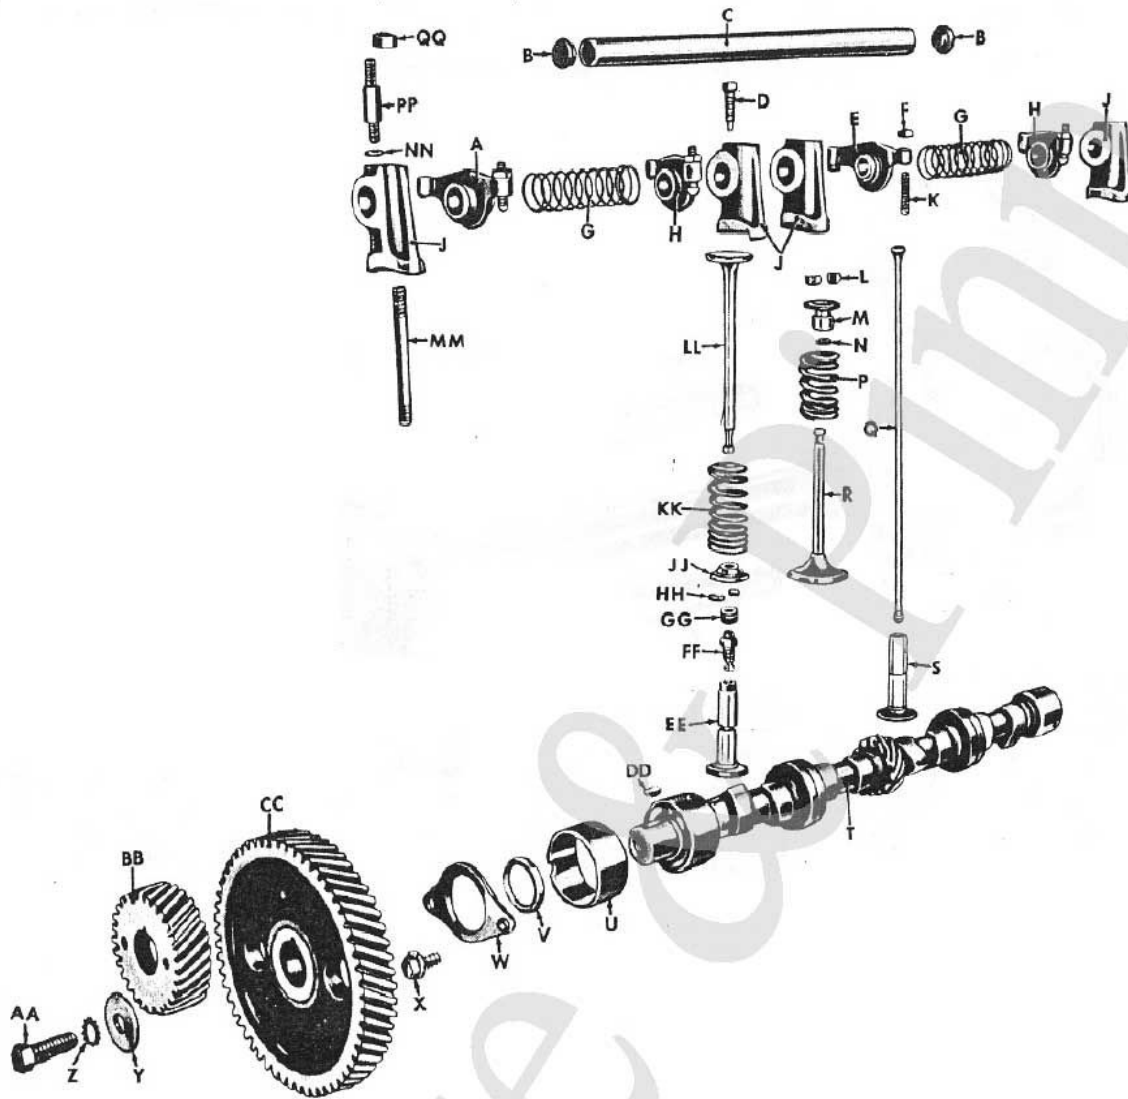


Nockenwelle / Camshaft

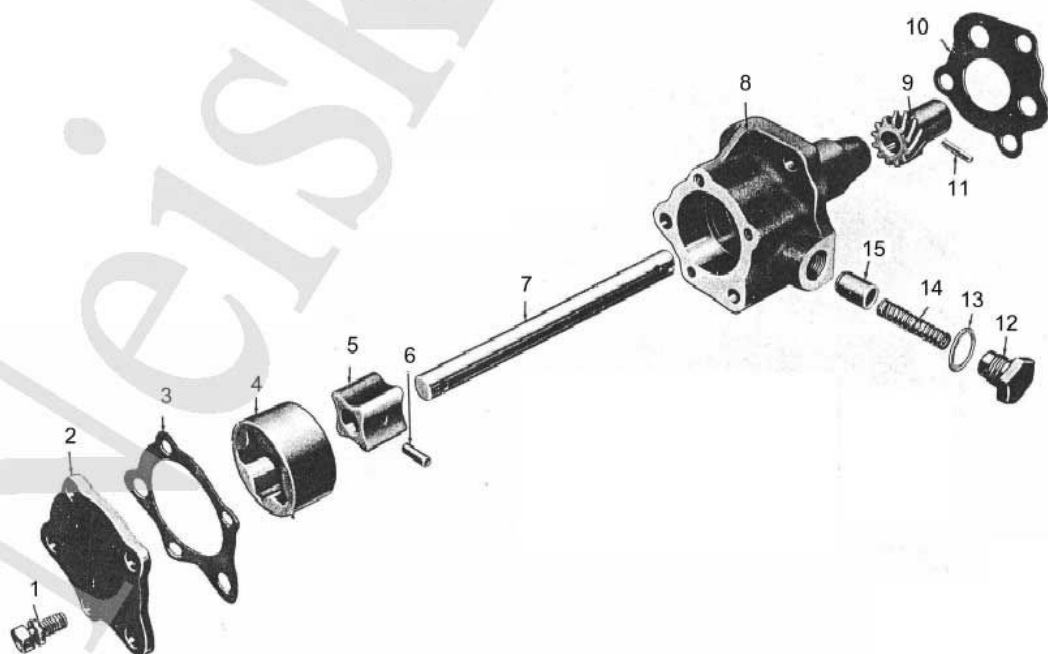 

Ölpumpe / Oil pump

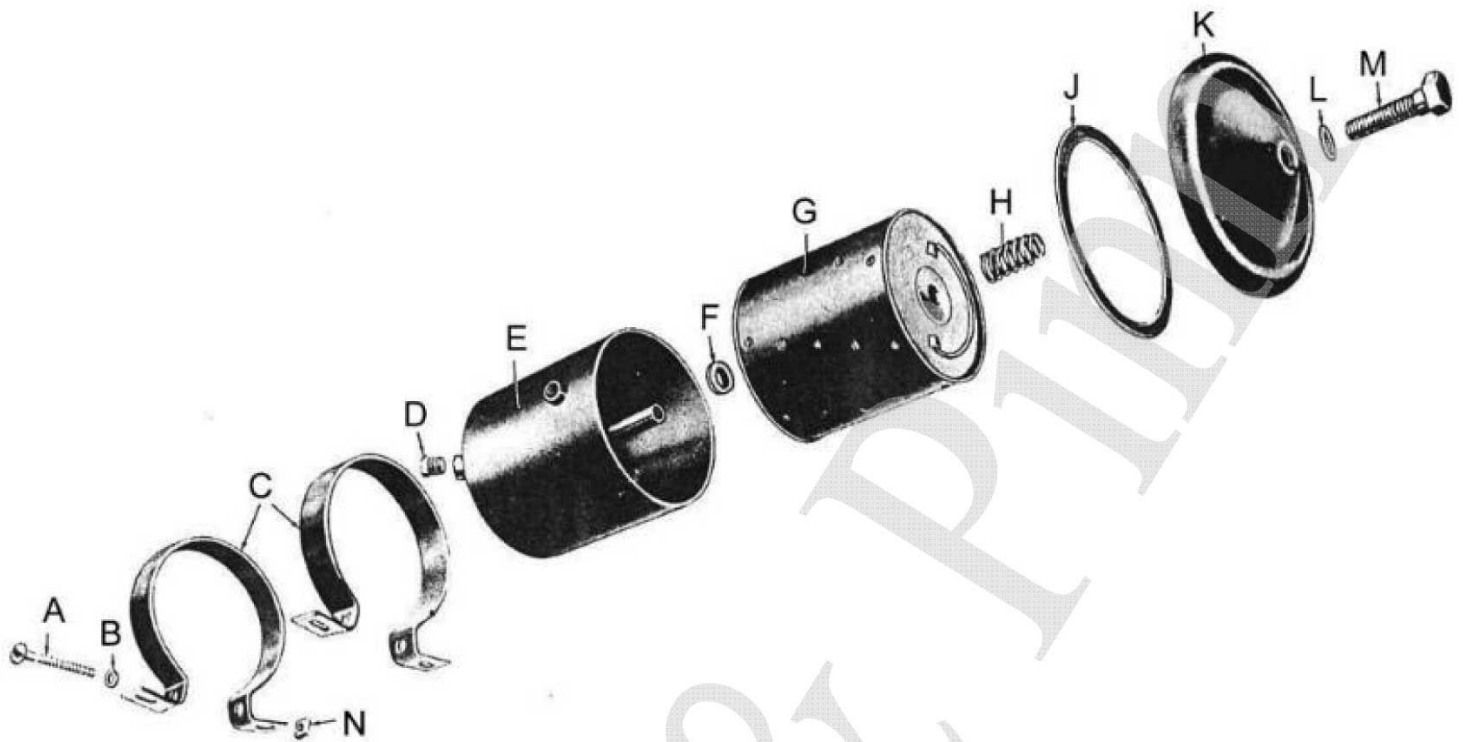 


Ölfilter / Oil filter

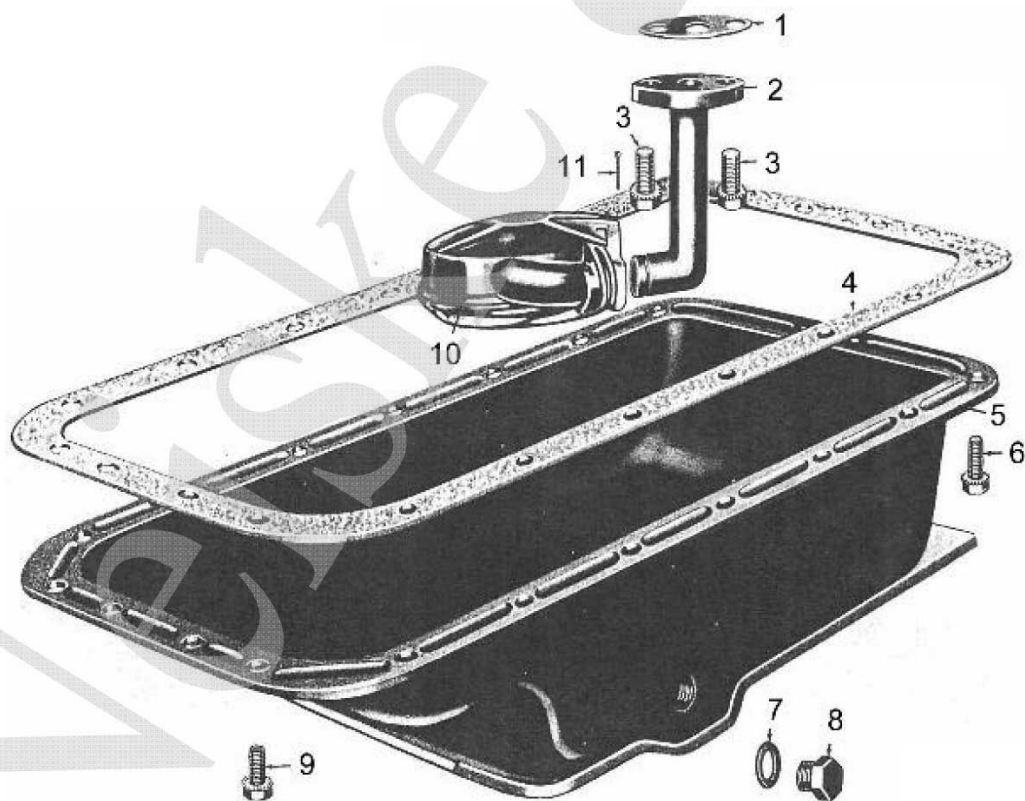 


Ölwanne / Oil pan

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

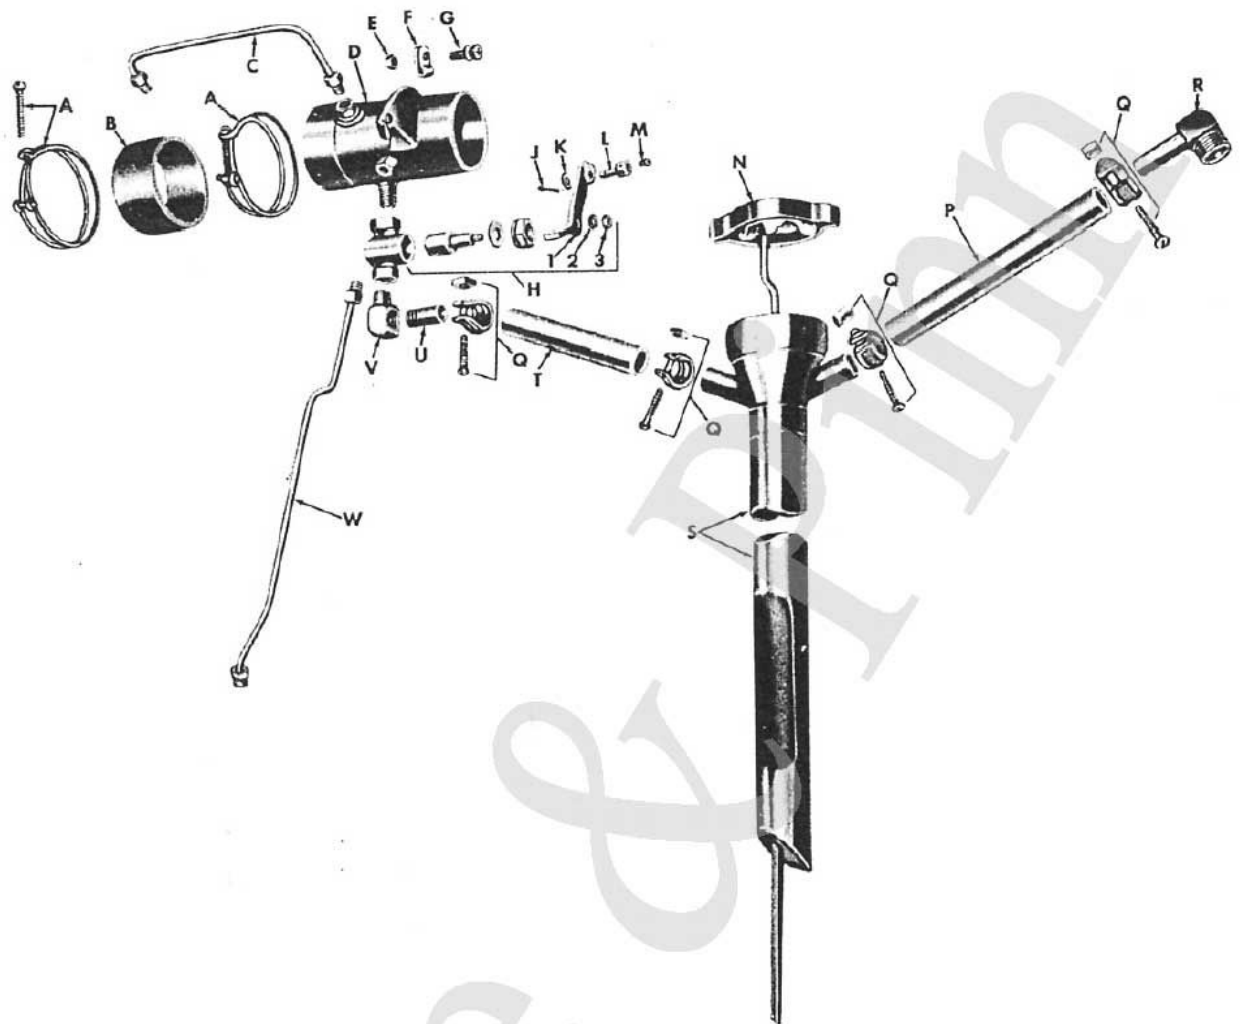


Motorbelüftung / Upper vent system

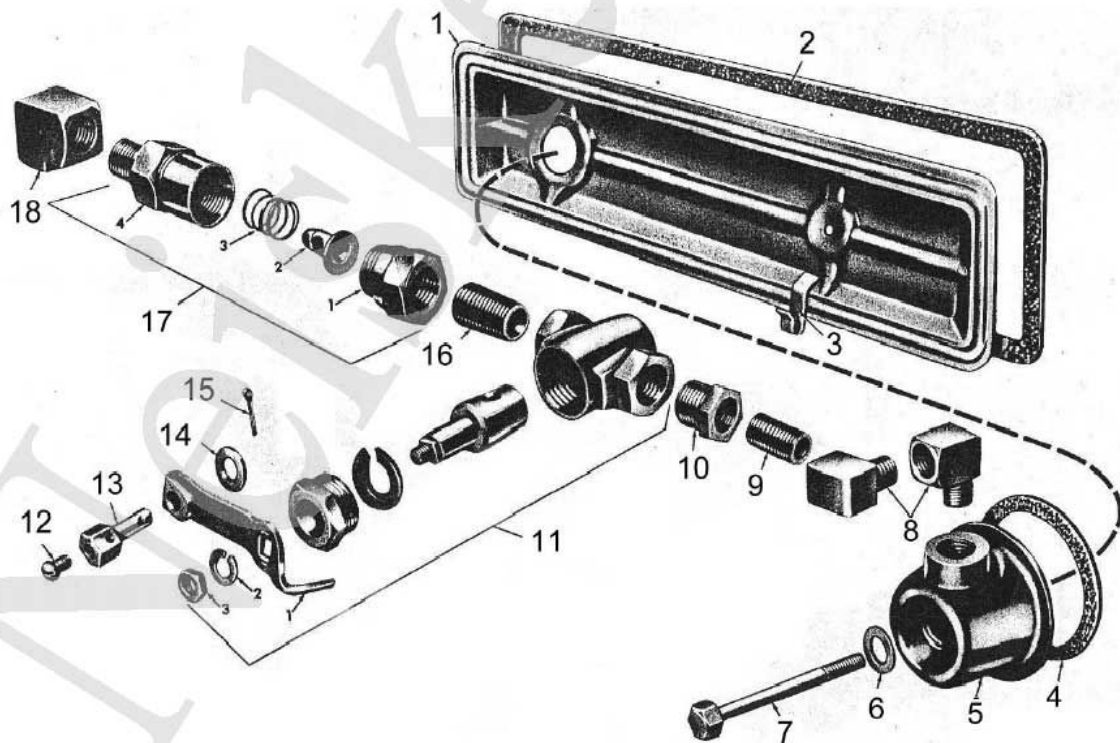 

Motorentlüftung / Lower vent system

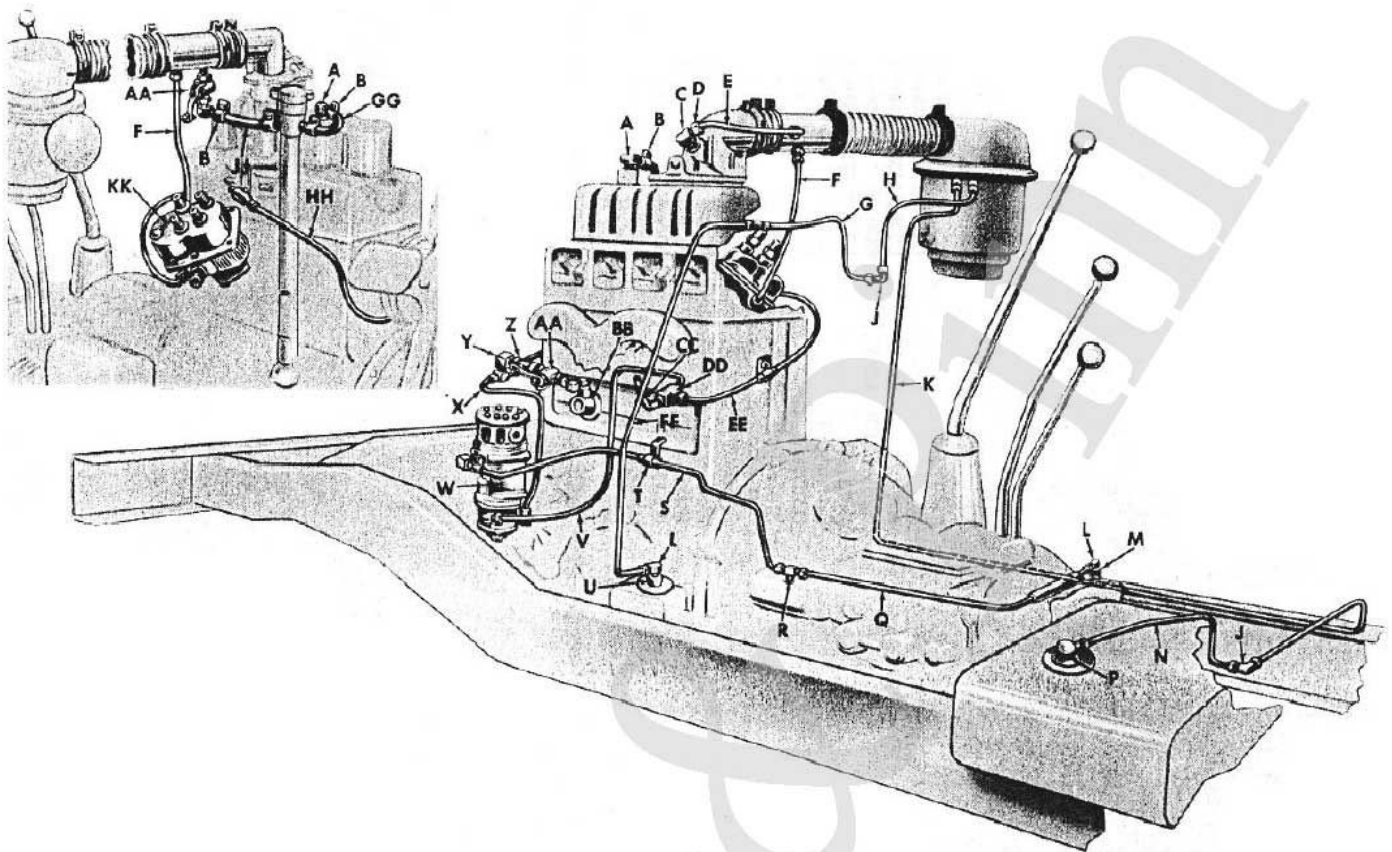 

Entlüfterleitungen / Ventilating system

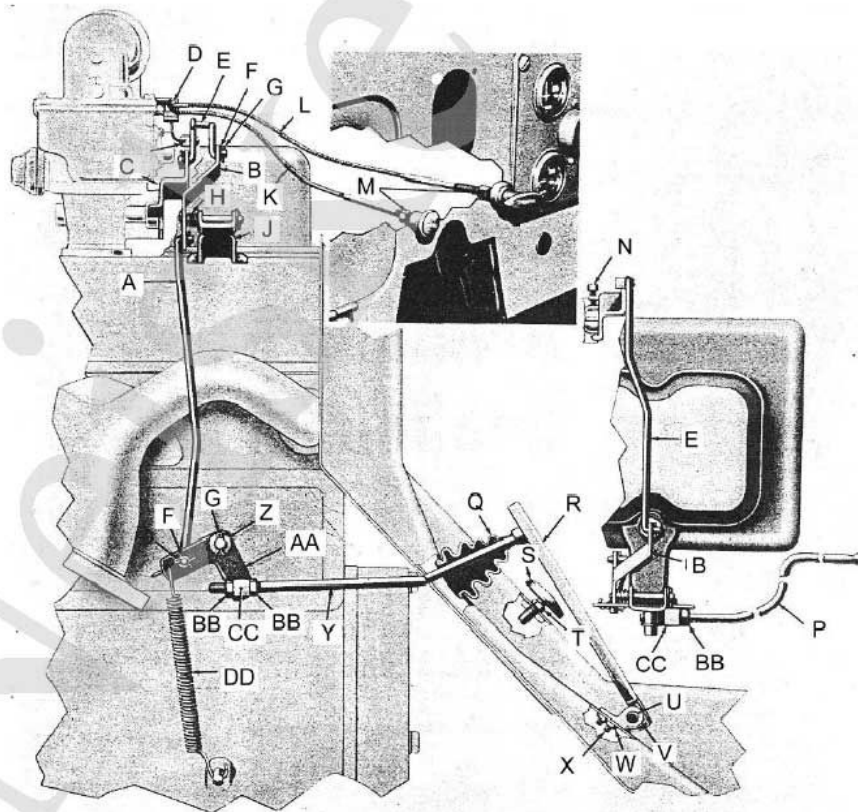 

Gasgestänge / Throttle and choke control


This diagram illustrates the exploded view of a mechanical assembly, likely a pump or valve. The components are numbered as follows:

- 1**: Two O-rings or seals.
- 2**: A long, threaded rod or shaft.
- 3**: A small pin or screw.
- 4**: A small pin or screw.
- 5**: A small pin or screw.
- 6**: A small pin or screw.
- 7**: A large, curved, bowl-shaped component.
- 8**: A long, thin rod or shaft.
- 9**: A circular disc or plate.
- 10**: A long, thin rod or shaft.
- 11**: A cylindrical component with a mesh screen.
- 12**: A cylindrical component with a flange.
- 13**: A long, thin rod or shaft.
- 14**: A small pin or screw.
- 15**: A large, curved, bowl-shaped component.
- 16**: A small pin or screw.
- 17**: A small pin or screw.


Luftfilter / Air cleaner

This diagram illustrates the exploded view of a Luftfilter / Air cleaner assembly. The main components shown include the air filter housing (top right), the air filter element (center), and the base plate (bottom left). Various parts are labeled with letters and numbers, indicating their specific functions and assembly order. The labels include: A, B, C, D, E, F, G, H, I, J, K, L, M, N, O, P, Q, R, S, T, U, V, W, X, Y, Z, AA, AB, AC, AD, AE, AF, AG, AH, AJ, AK, AL, AM, AN, AP, AR, AS, AT, AU, AV, AW, AX, AY, AZ, BA, BB, BC, BD, BE, BF, BG, BH, BI, BJ, BK, BL, BM, BN, BO, BP, BQ, BR, BS, BT, BU, BV, BW, BX, BY, BZ, CA, CB, CC, CD, CE, CF, CG, CH, CI, CJ, CK, CL, CM, CN, CO, CP, CQ, CR, CS, CT, CU, CV, CW, CX, CY, CZ, DA, DB, DC, DD, DE, DF, DG, DH, DI, DJ, DK, DL, DM, DN, DO, DP, DQ, DR, DS, DT, DU, DV, DW, DX, DY, DZ, EA, EB, EC, ED, EE, EF, EG, EH, EI, EJ, EK, EL, EM, EN, EO, EP, EQ, ER, ES, ET, EU, EV, EW, EX, EY, EZ, FA, FB, FC, FD, FE, FF, FG, FH, FI, FJ, FK, FL, FM, FN, FO, FP, FQ, FR, FS, FT, FU, FV, FW, FX, FY, FZ, GA, GB, GC, GD, GE, GF, GG, GH, GI, GJ, GK, GL, GM, GN, GO, GP, GQ, GR, GS, GT, GU, GV, GW, GX, GY, GZ, HA, HB, HC, HD, HE, HF, HG, HH, HI, HJ, HK, HL, HM, HN, HO, HP, HQ, HR, HS, HT, HU, HV, HW, HX, HY, HZ, IA, IB, IC, ID, IE, IF, IG, IH, II, IJ, IK, IL, IM, IN, IO, IP, IQ, IR, IS, IT, IU, IV, IW, IX, IY, IZ, JA, JB, JC, JD, JE, JF, JG, JH, JI, JJ, JK, JL, JM, JN, JO, JP, JQ, JR, JS, JT, JU, JV, JW, JX, JY, JZ, KA, KB, KC, KD, KE, KF, KG, KH, KI, KJ, KK, KL, KM, KN, KO, KP, KQ, KR, KS, KT, KU, KV, KW, KX, KY, KZ, LA, LB, LC, LD, LE, LF, LG, LH, LI, LJ, LK, LL, LM, LN, LO, LP, LQ, LR, LS, LT, LU, LV, LW, LX, LY, LZ, MA, MB, MC, MD, ME, MF, MG, MH, MI, MJ, MK, ML, MM, MN, MO, MP, MQ, MR, MS, MT, MU, MV, MW, MX, MY, MZ, NA, NB, NC, ND, NE, NF, NG, NH, NI, NJ, NK, NL, NM, NO, NP, NQ, NR, NS, NT, NU, NV, NW, NX, NY, NZ, OA, OB, OC, OD, OE, OF, OG, OH, OI, OJ, OK, OL, OM, ON, OO, OP, OQ, OR, OS, OT, OU, OV, OW, OX, OY, OZ, PA, PB, PC, PD, PE, PF, PG, PH, PI, PJ, PK, PL, PM, PN, PO, PP, PQ, PR, PS, PT, PU, PV, PW, PX, PY, PZ, QA, QB, QC, QD, QE, QF, QG, QH, QI, QJ, QK, QL, QM, QN, QO, QP, QQ, QR, QS, QT, QU, QV, QW, QX, QY, QZ, RA, RB, RC, RD, RE, RF, RG, RH, RI, RJ, RK, RL, RM, RN, RO, RP, RQ, RR, RS, RT, RU, RV, RW, RX, RY, RZ, SA, SB, SC, SD, SE, SF, SG, SH, SI, SJ, SK, SL, SM, SN, SO, SP, SQ, SR, SS, ST, SU, SV, SW, SX, SY, SZ, TA, TB, TC, TD, TE, TF, TG, TH, TI, TJ, TK, TL, TM, TN, TO, TP, TQ, TR, TS, TT, TU, TV, TW, TX, TY, TZ, UA, UB, UC, UD, UE, UF, UG, UH, UI, UJ, UK, UL, UM, UN, UO, UP, UQ, UR, US, UT, UY, UZ, VA, VB, VC, VD, VE, VF, VG, VH, VI, VJ, VK, VL, VM, VN, VO, VP, VQ, VR, VS, VT, VU, VV, VW, VX, VY, VZ, WA, WB, WC, WD, WE, WF, WG, WH, WI, WJ, WK, WL, WM, WN, WO, WP, WQ, WR, WS, WT, WU, WV, WW, WX, WY, WZ, XA, XB, XC, XD, XE, XF, XG, XH, XI, XJ, XK, XL, XM, XN, XO, XP, XQ, XR, XS, XT, XU, XV, XW, XX, XY, XZ, YA, YB, YC, YD, YE, YF, YG, YH, YI, YJ, YK, YL, YM, YN, YO, YP, YQ, YR, YS, YT, YU, YV, YW, YX, YY, YZ, ZA, ZB, ZC, ZD, ZE, ZF, ZG, ZH, ZI, ZJ, ZK, ZL, ZM, ZN, ZO, ZP, ZQ, ZR, ZS, ZT, ZU, ZV, ZW, ZX, ZY, ZZ.

 Page 9

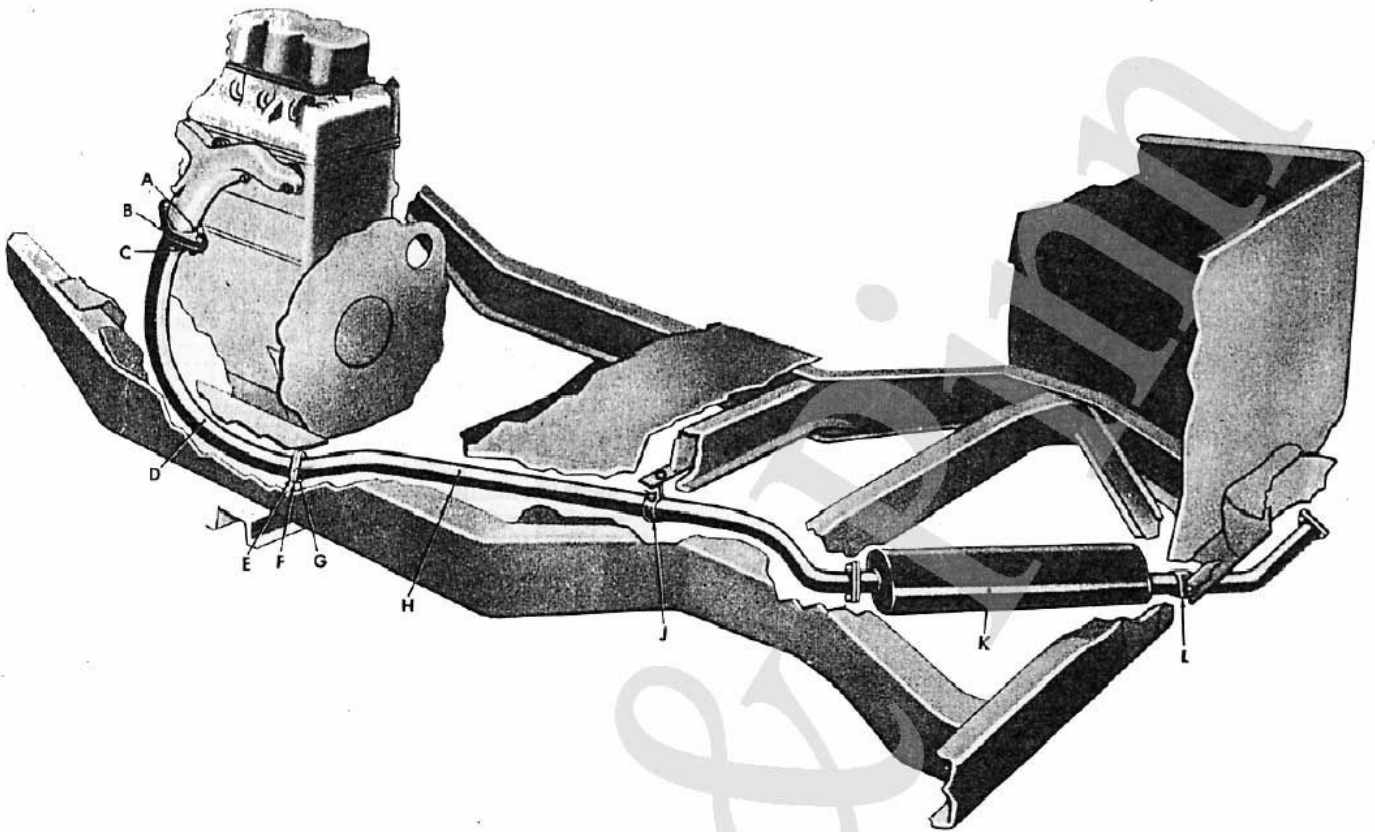


Auspuff / Exhaust system

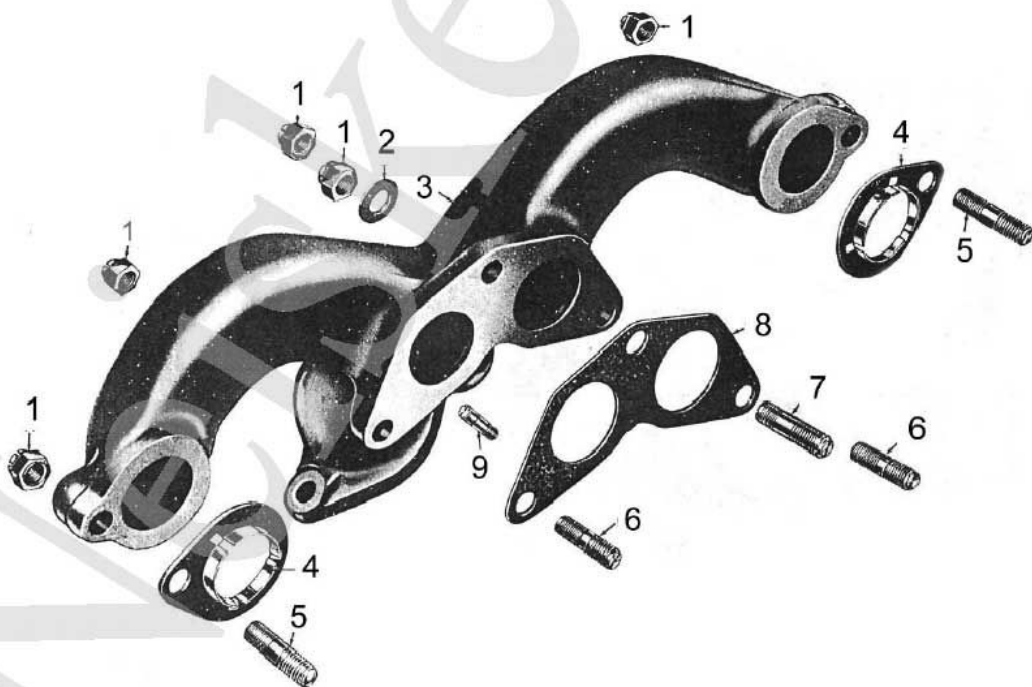 


Auspuffkrümmer / Exhaust manifold

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

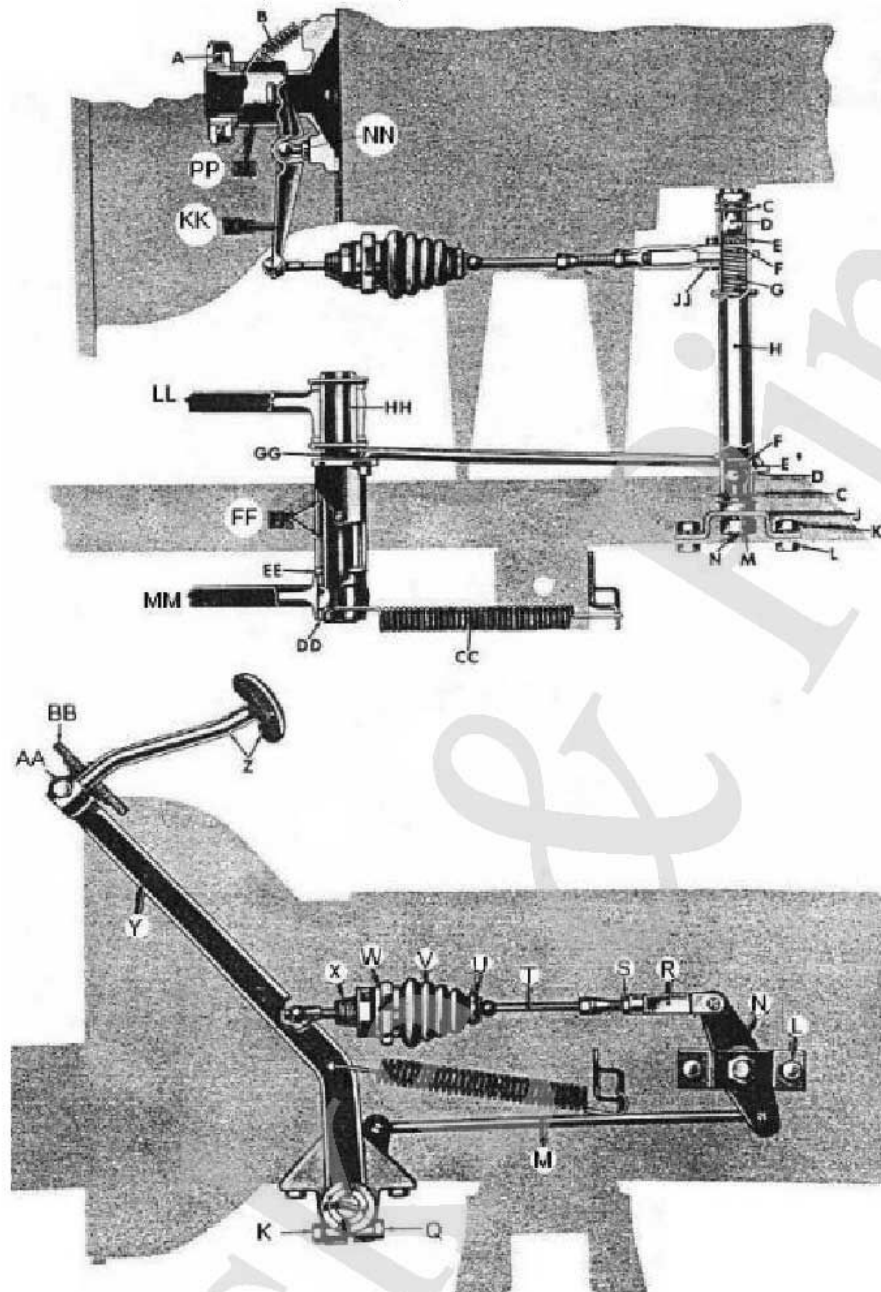


Kupplungspedal / Clutch linkage

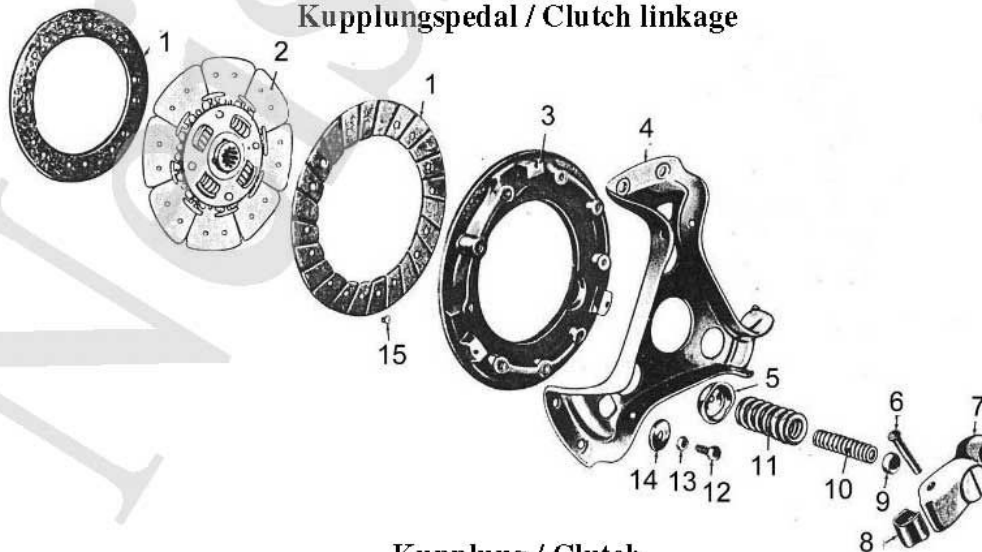 


Kupplung / Clutch

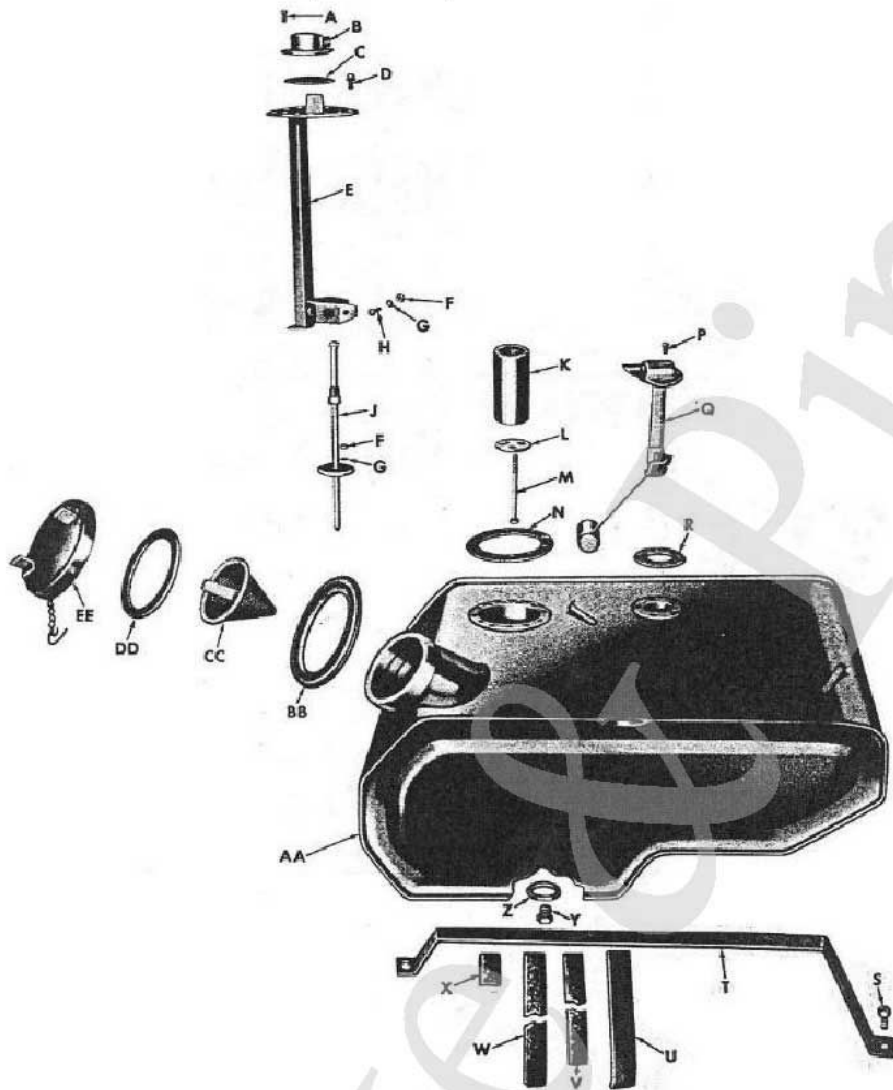 


Tank / Fuel tank

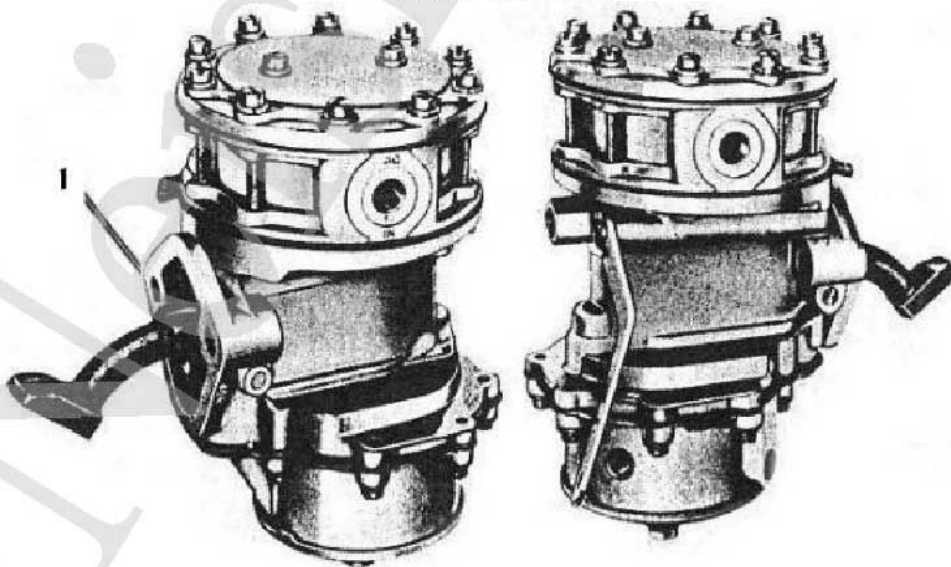 


Benzinpumpe / Fuel and vacuum pump

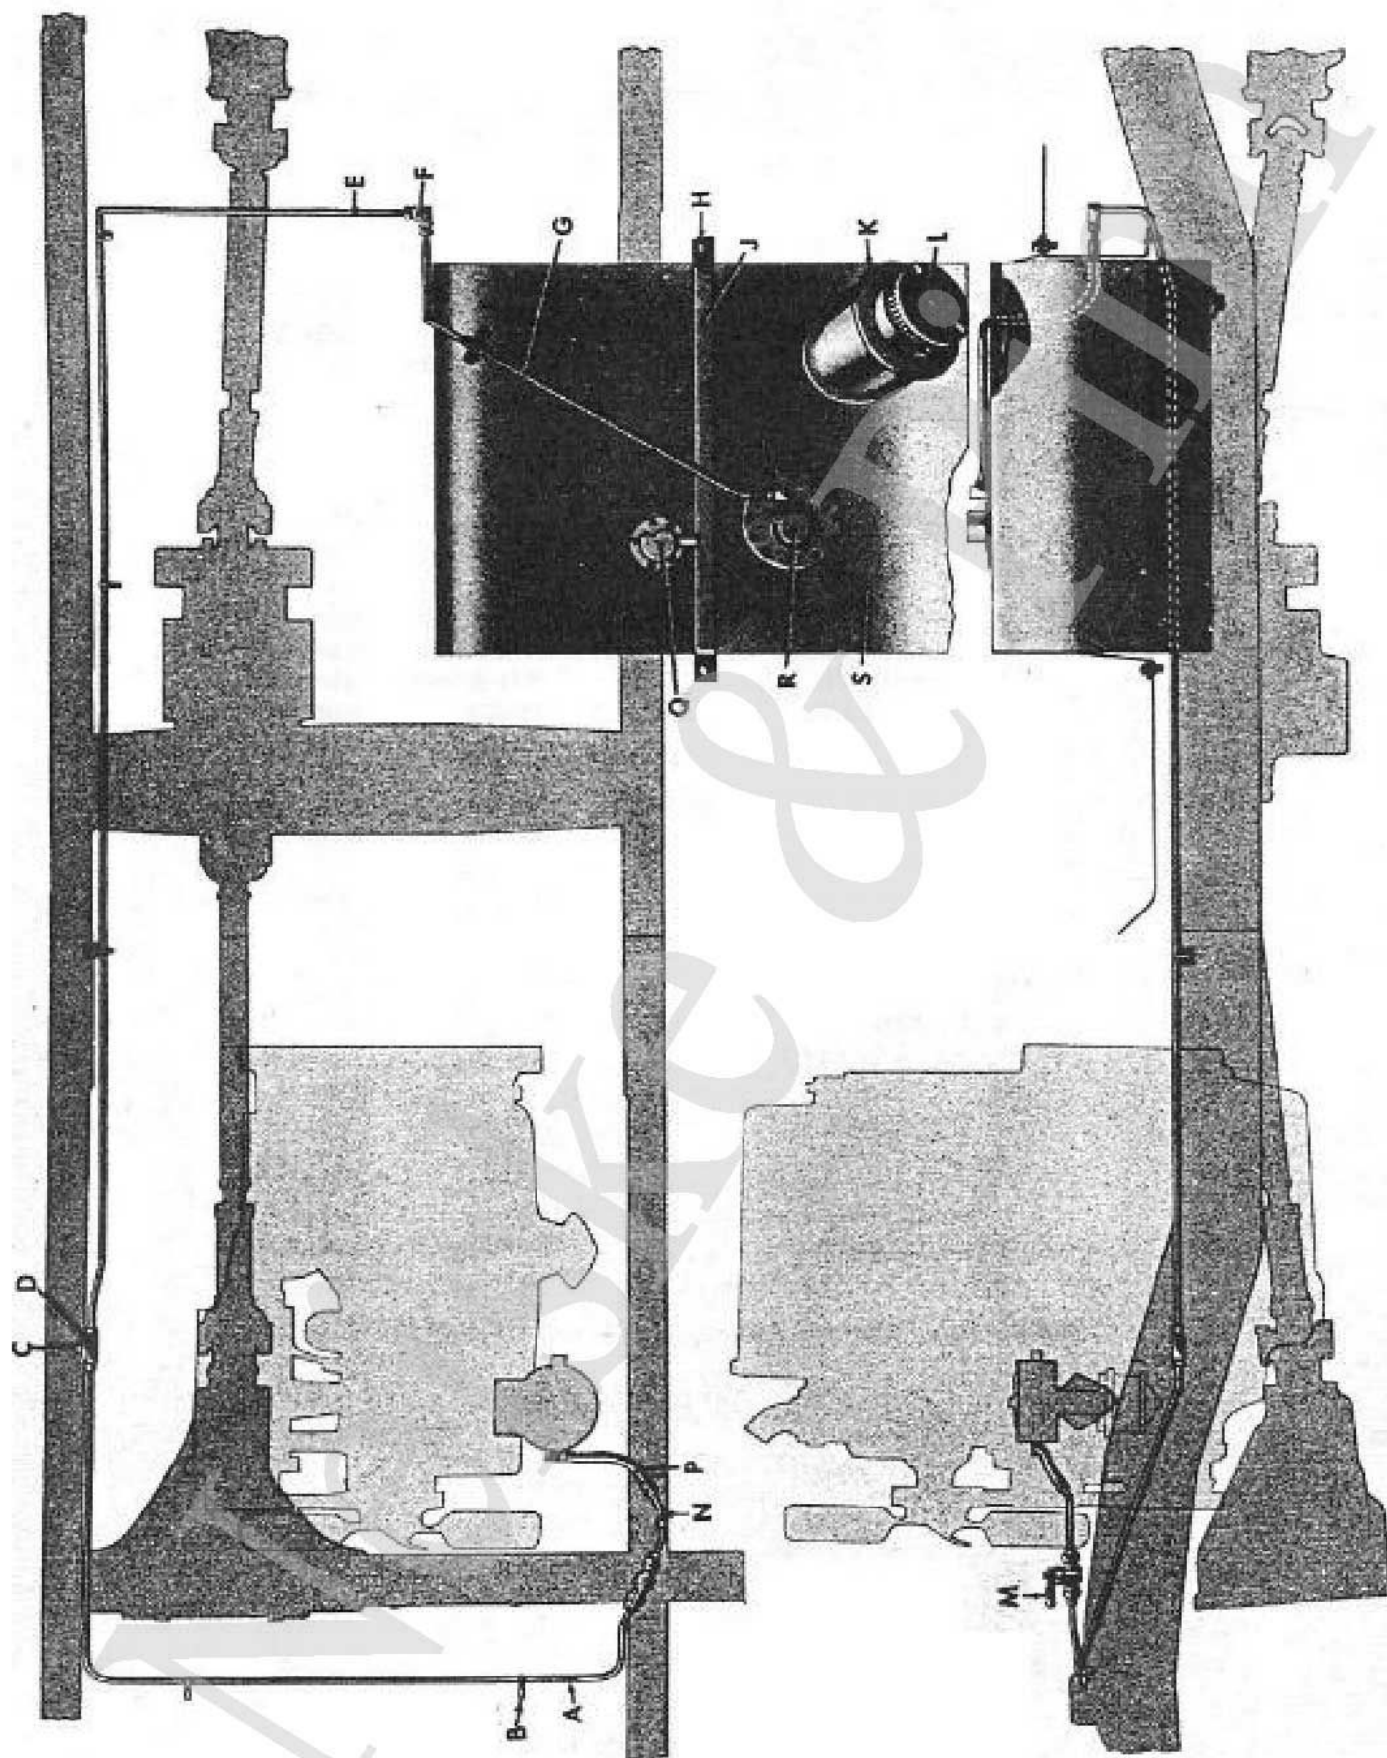 


Benzintank & Leitungen / Fuel system

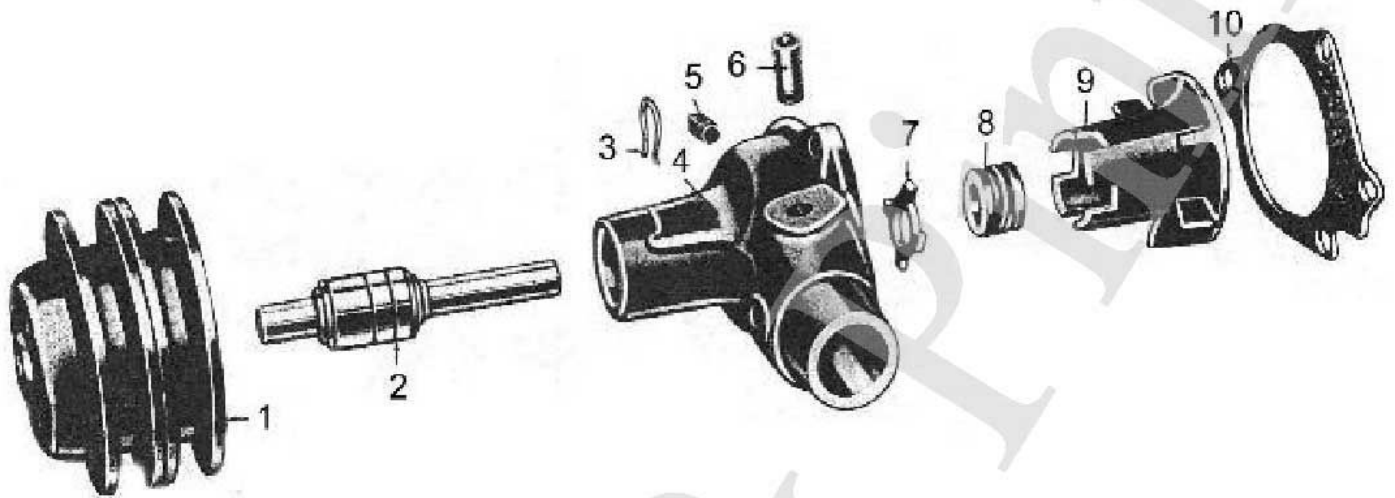 

Wasserpumpe / Water pump

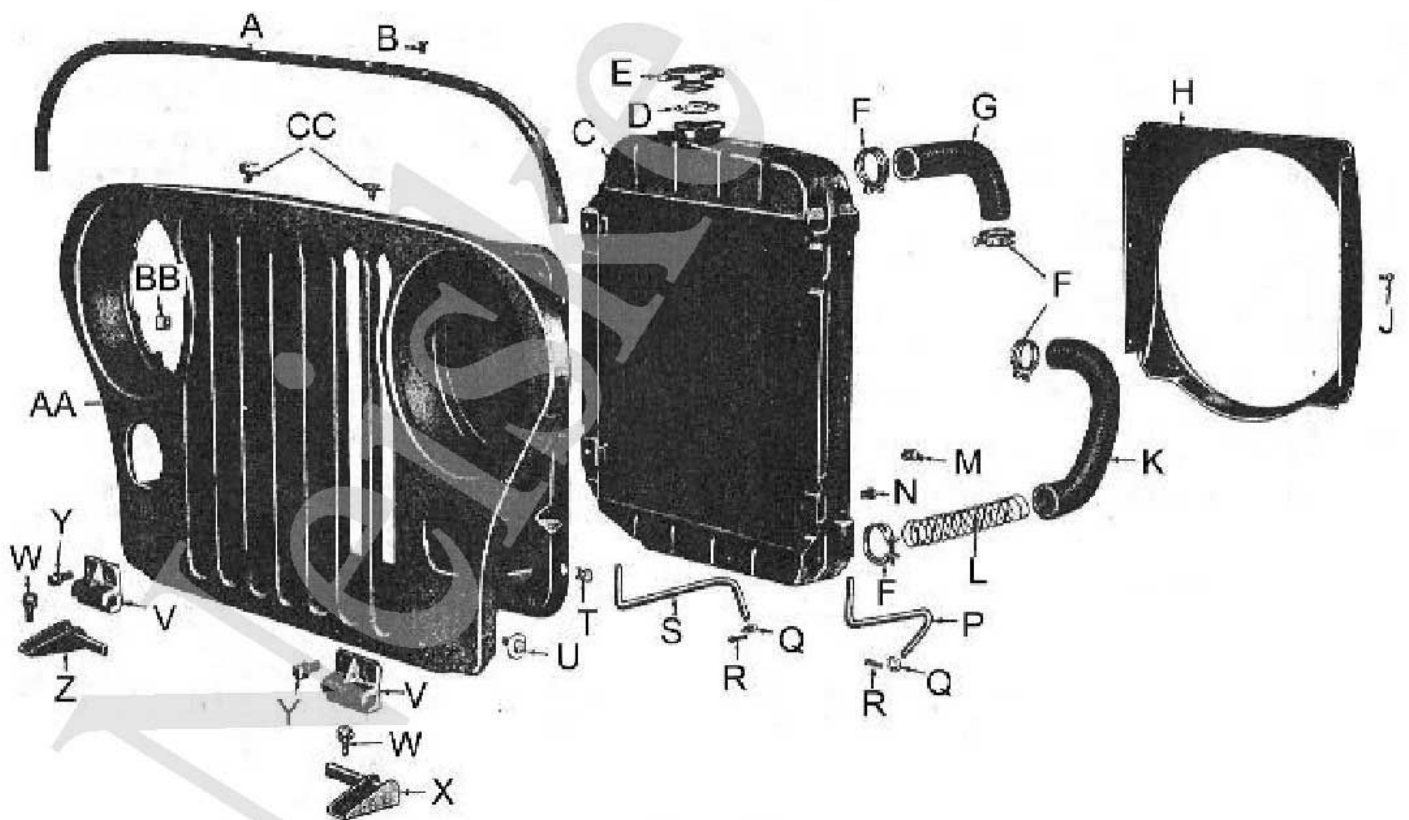 


Kühler und Grill / Radiator and guard

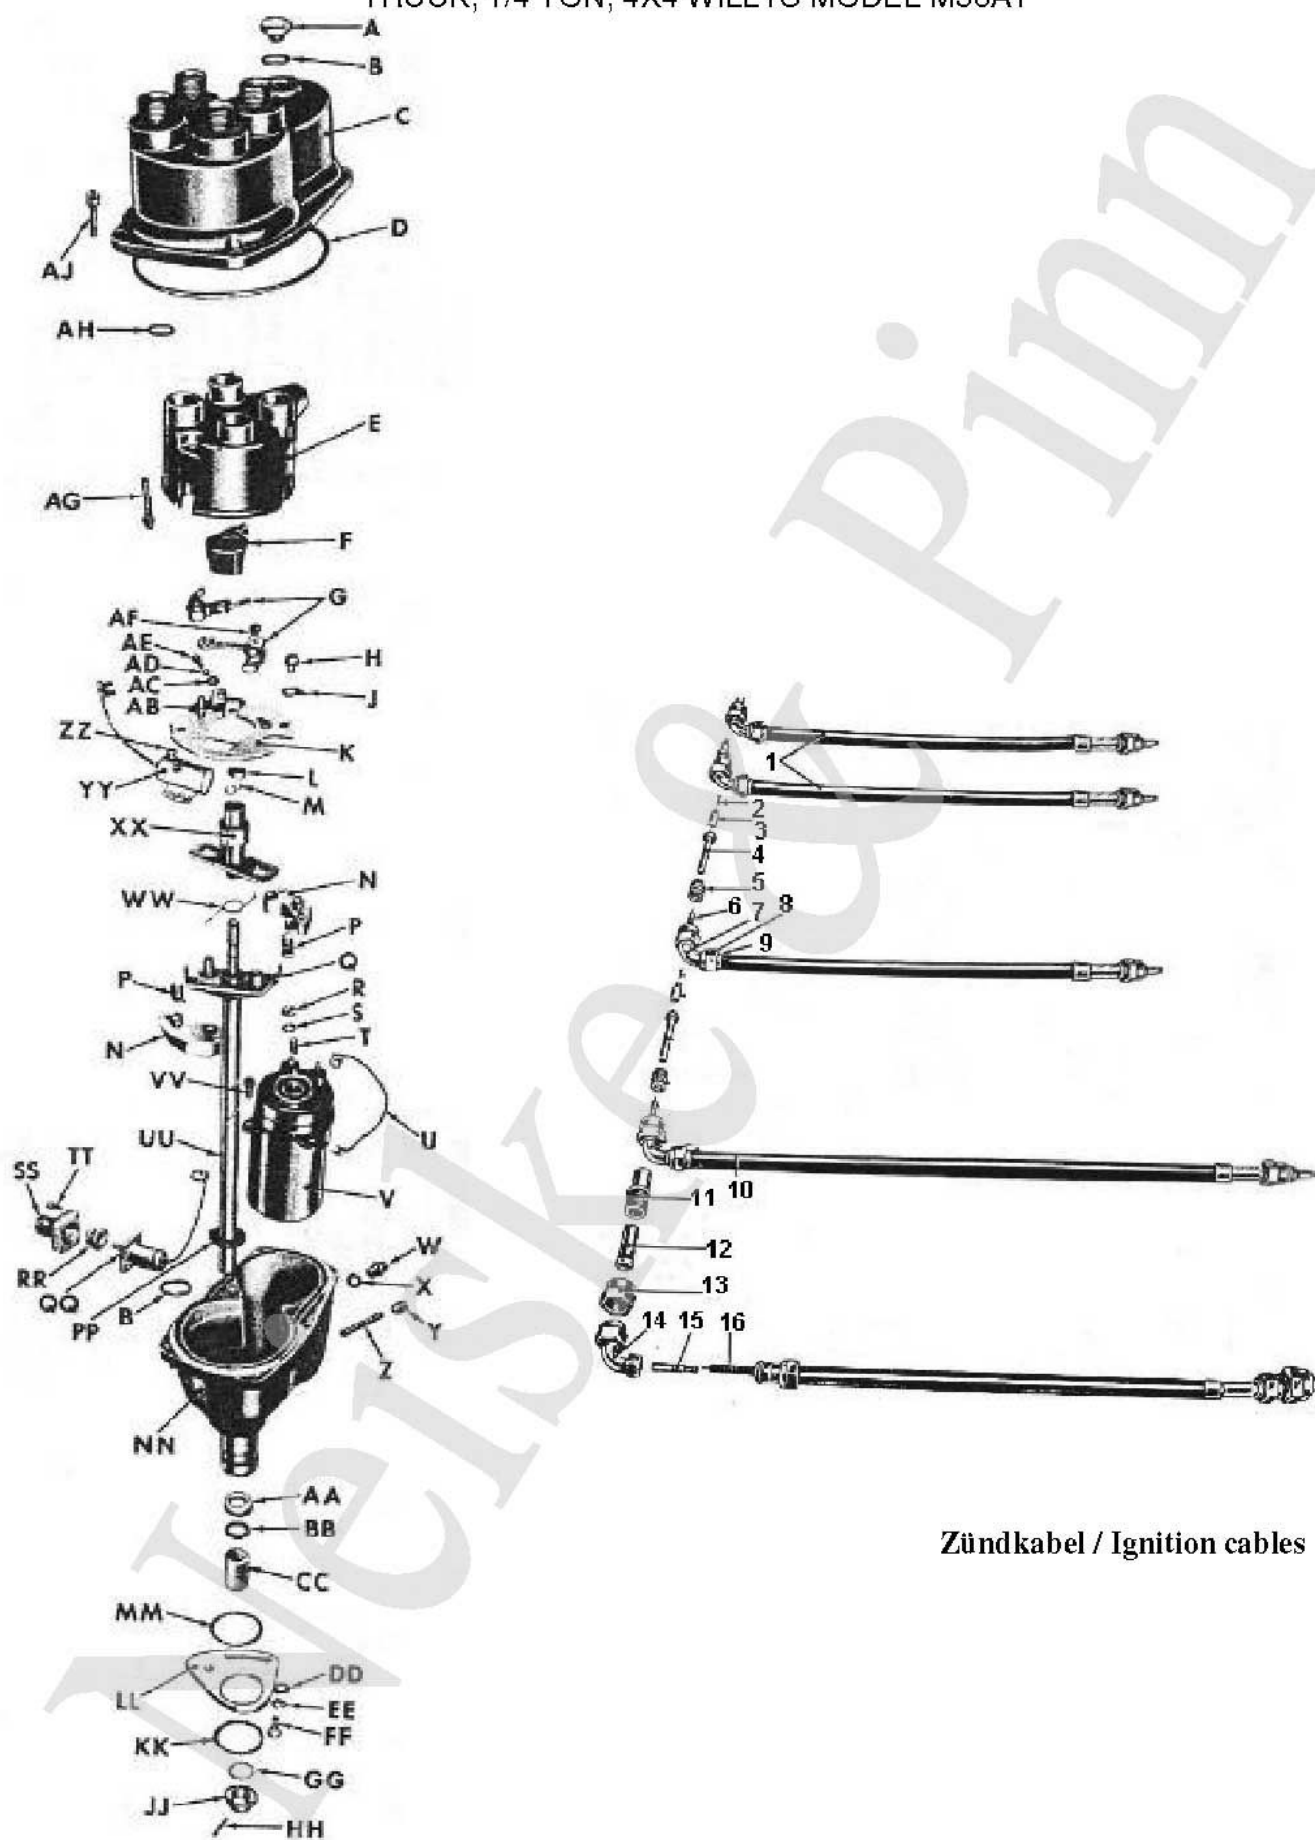 


Zündkabel / Ignition cables

 Zündverteiler / Distributor

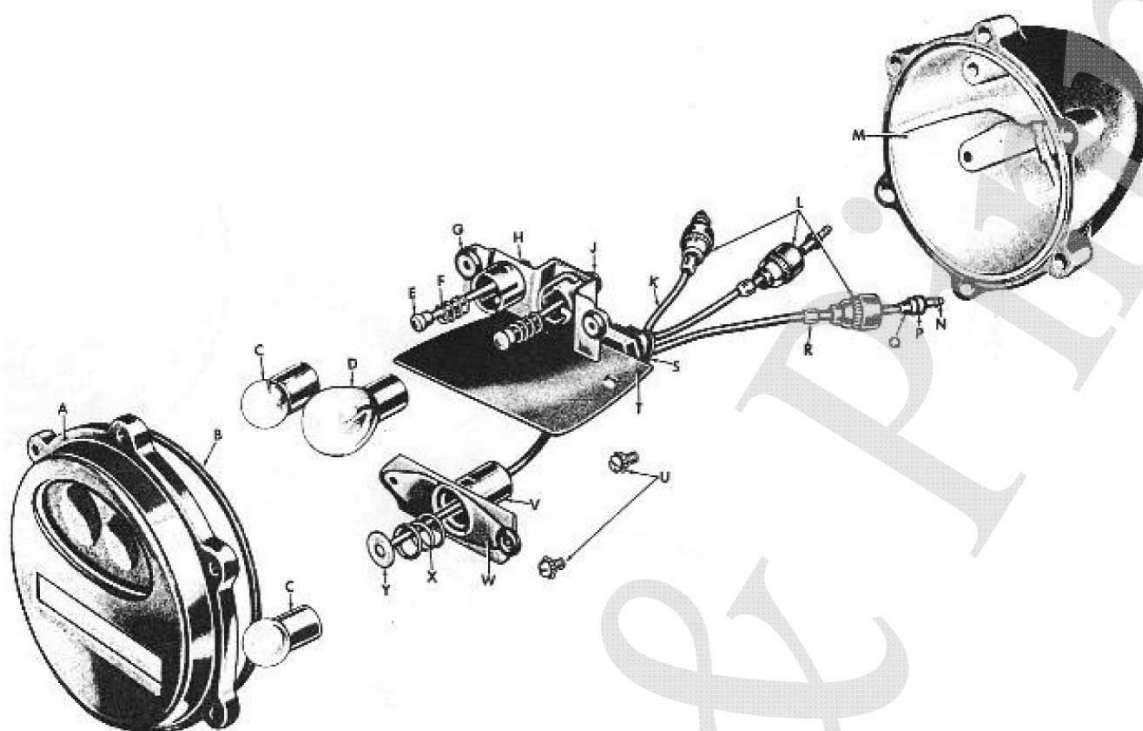

 
Rücklicht / Blackout service and stop light

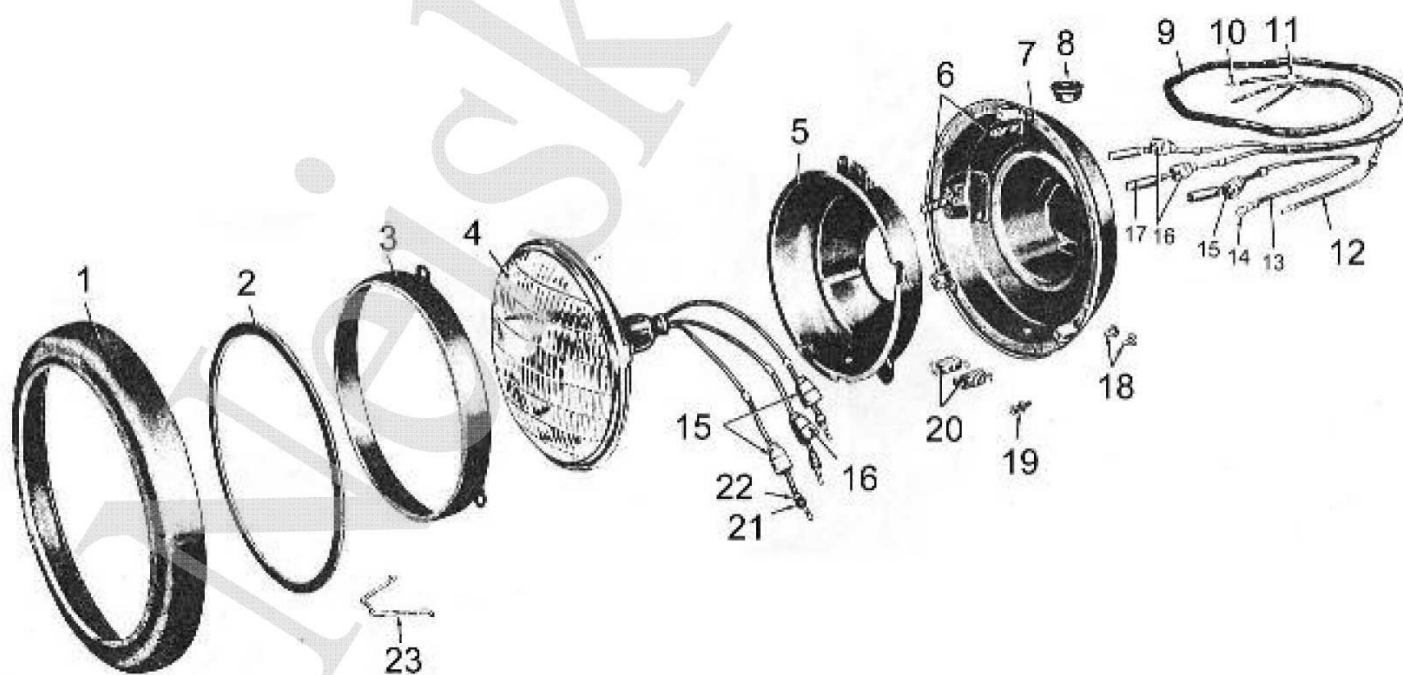


Scheinwerfer / Headlight



 
Tarnscheinwerfer / Blackout headlight

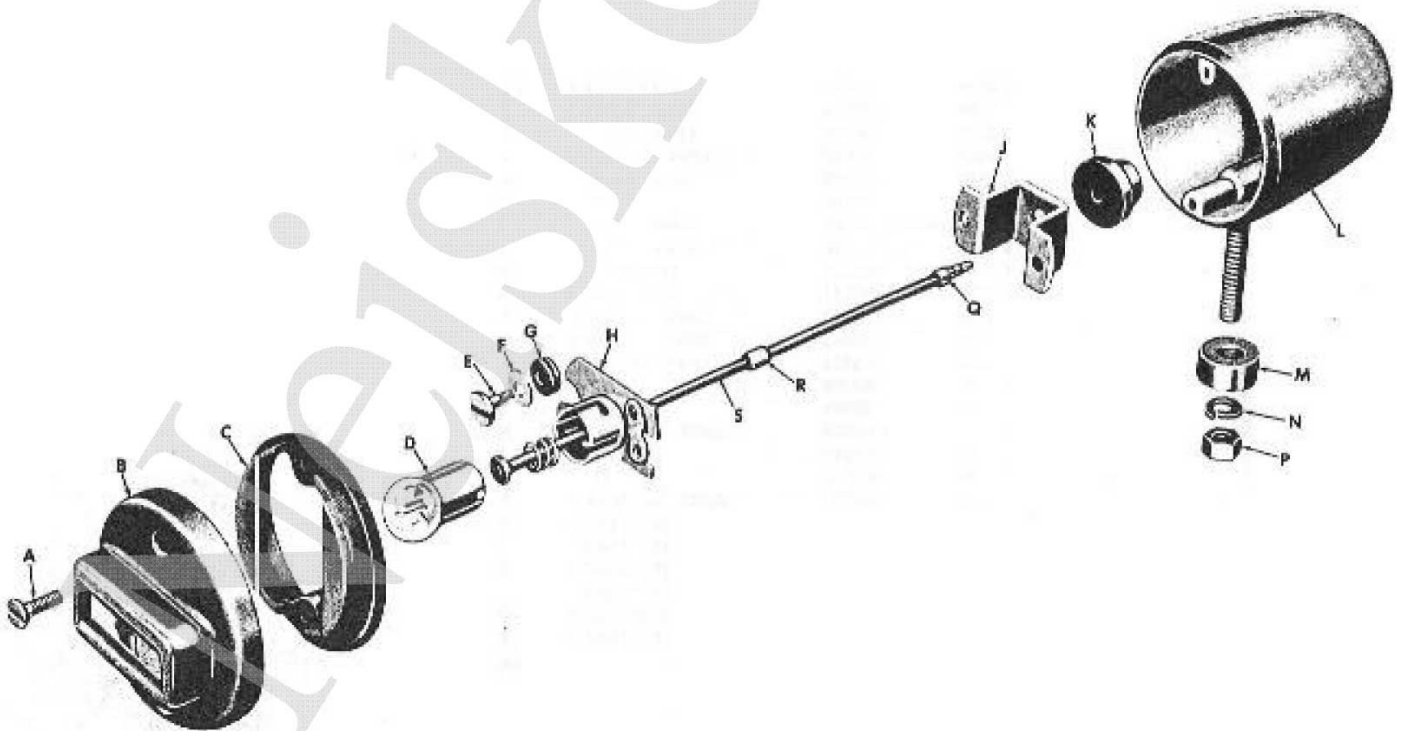


Tarnlicht / Blackout marker light

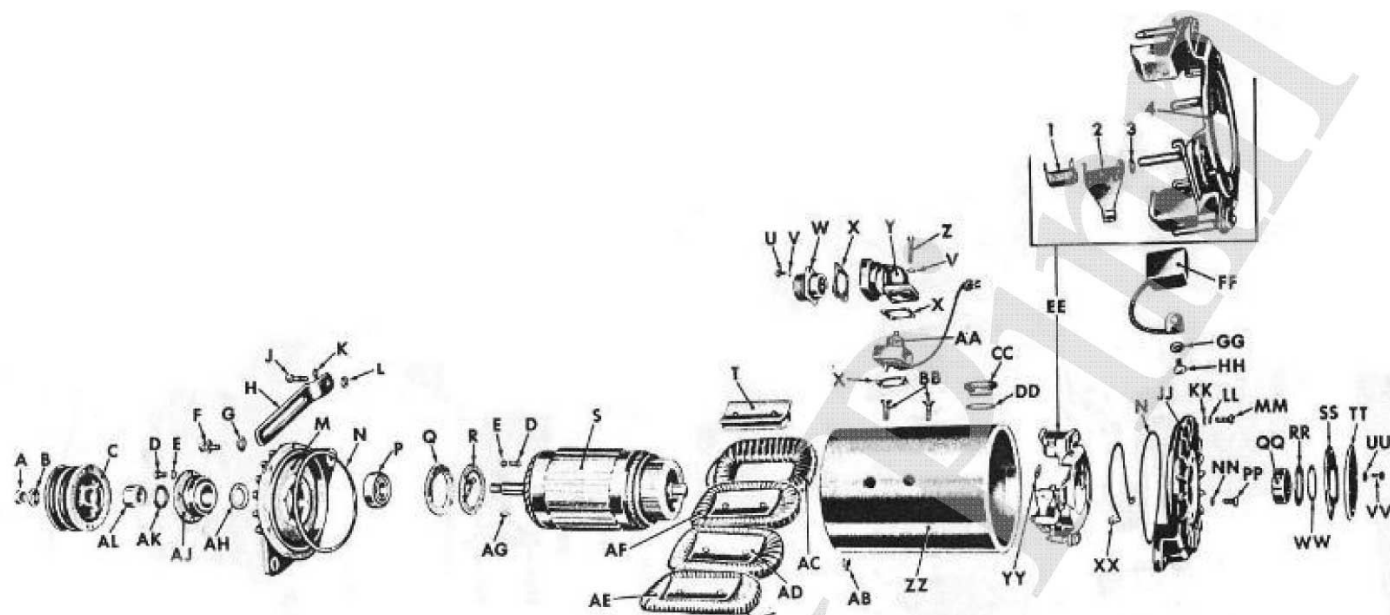 

 
Lichtmaschine / Generator 24 V Delco-Remy

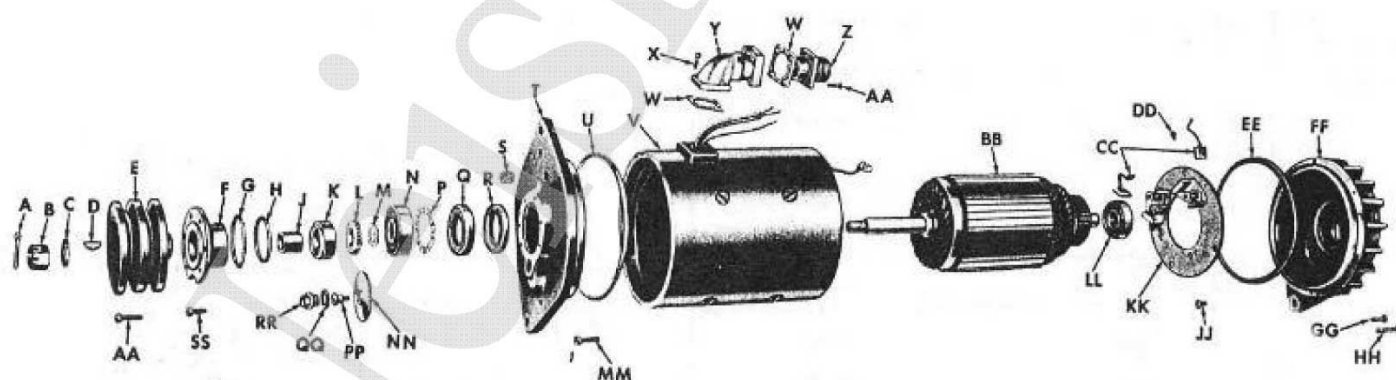

 Lichtmaschine / Generator 24 V Auto-Lite

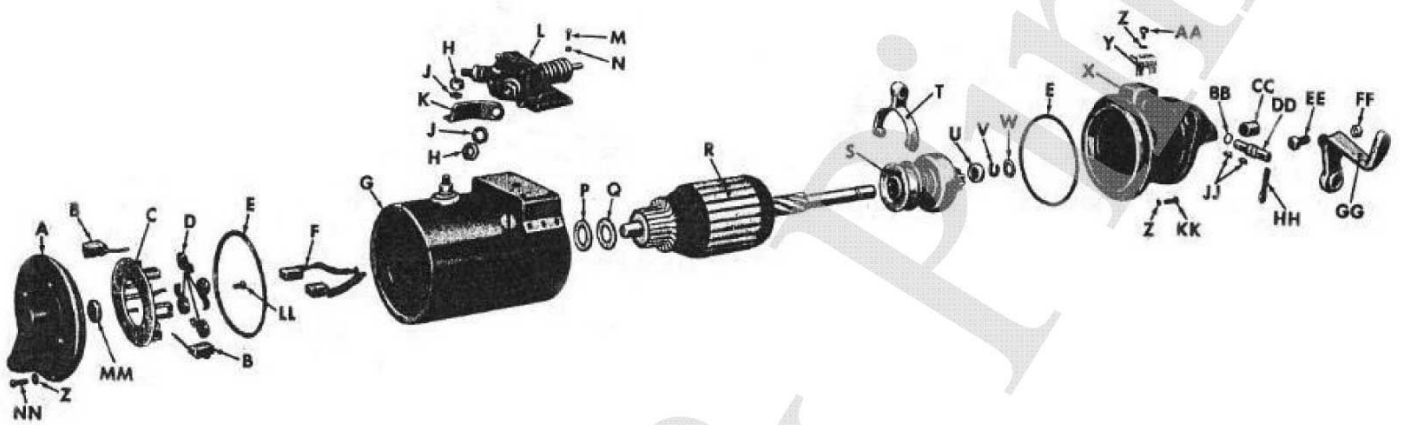

Anlasser / Starter

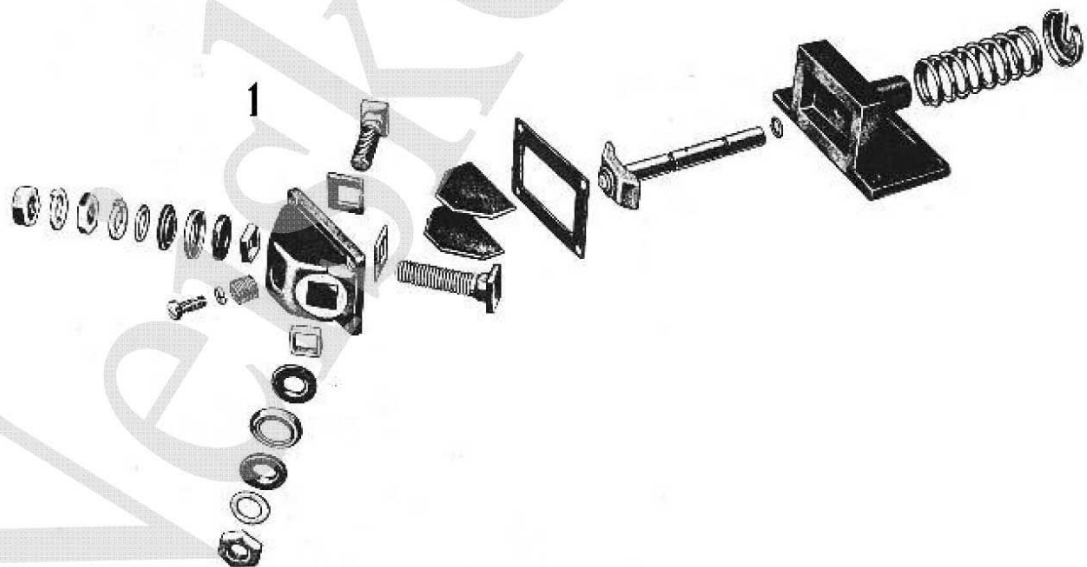 


Anlasserschalter / Starter switch

[illegible]


Regler / Generator regulator

This exploded view diagram illustrates the components of a generator regulator. The parts are numbered 1 through 30. The assembly includes a main mounting plate (11) with four circular cutouts. Various electrical components, including solenoids (1, 2, 3, 4, 5, 16, 17, 18, 20, 21) and relays (19), are shown. A large terminal block (23) with multiple wires (14, 24, 25) is also depicted. Smaller components like screws (10, 13, 14, 26, 27, 28, 29, 30), washers (7, 8), and spacers (6) are shown in their respective assembly positions. A large, faint watermark 'L' is visible in the background.

 
Page 20

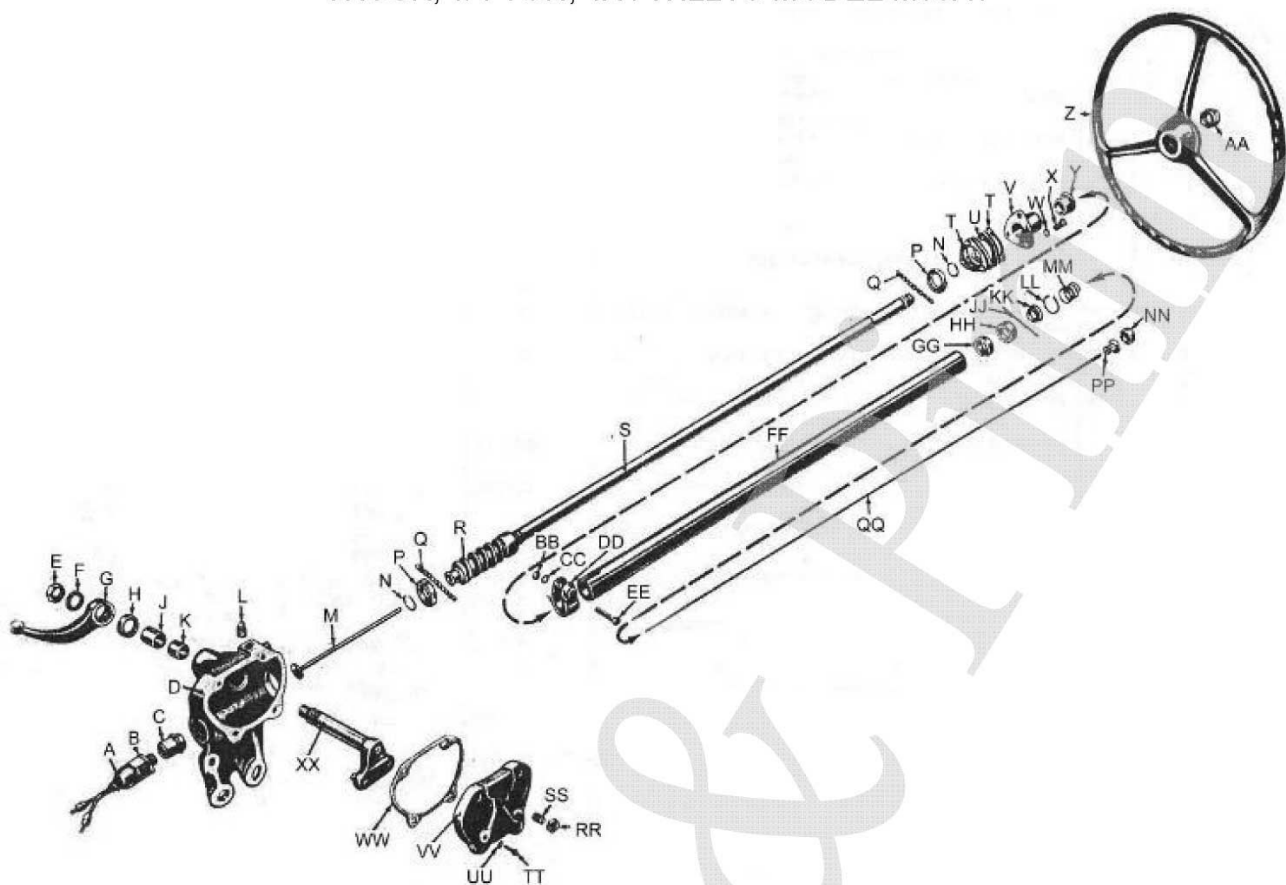

 
Lenkung / Steering gear and related parts

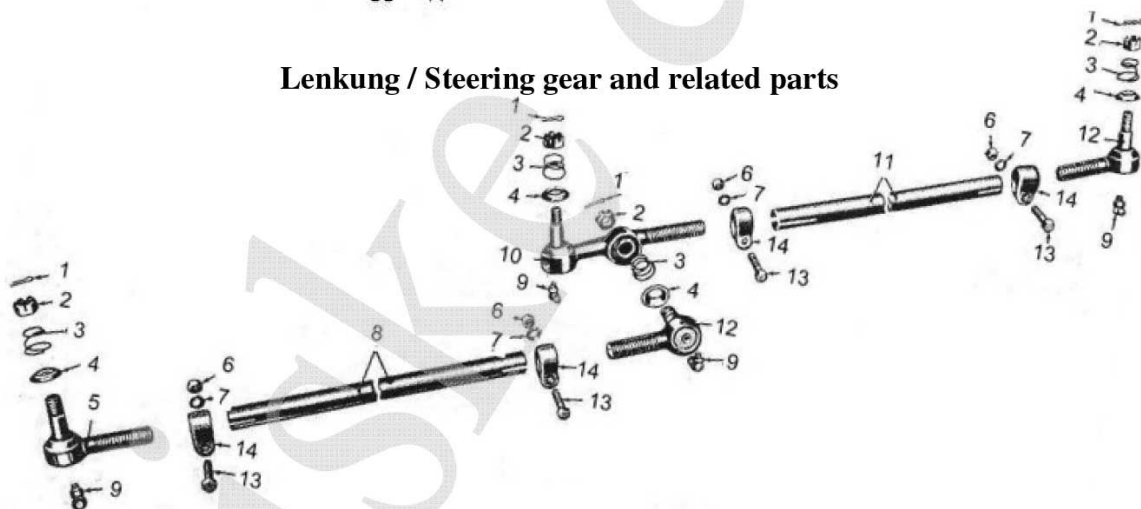


Lenkgestänge / Steering tie rod

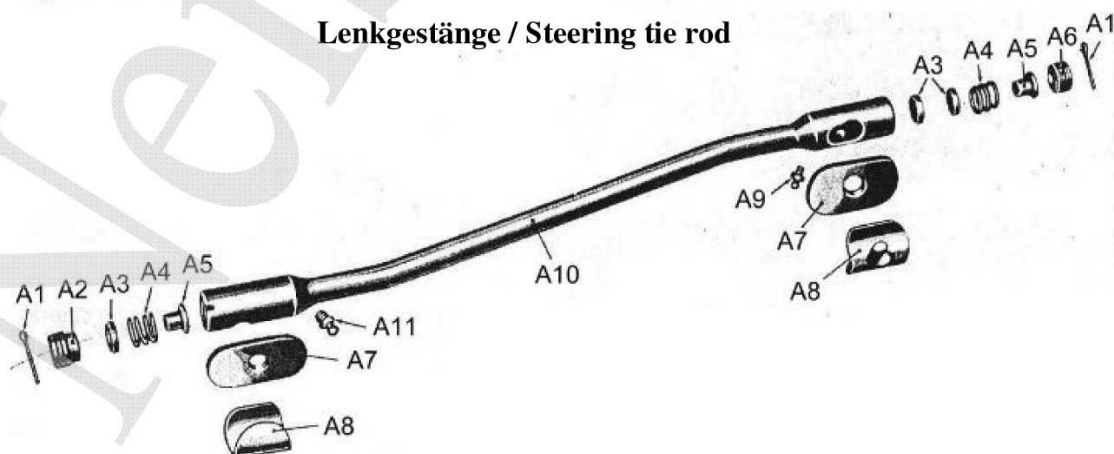 


Lenkschubstange / Drag link

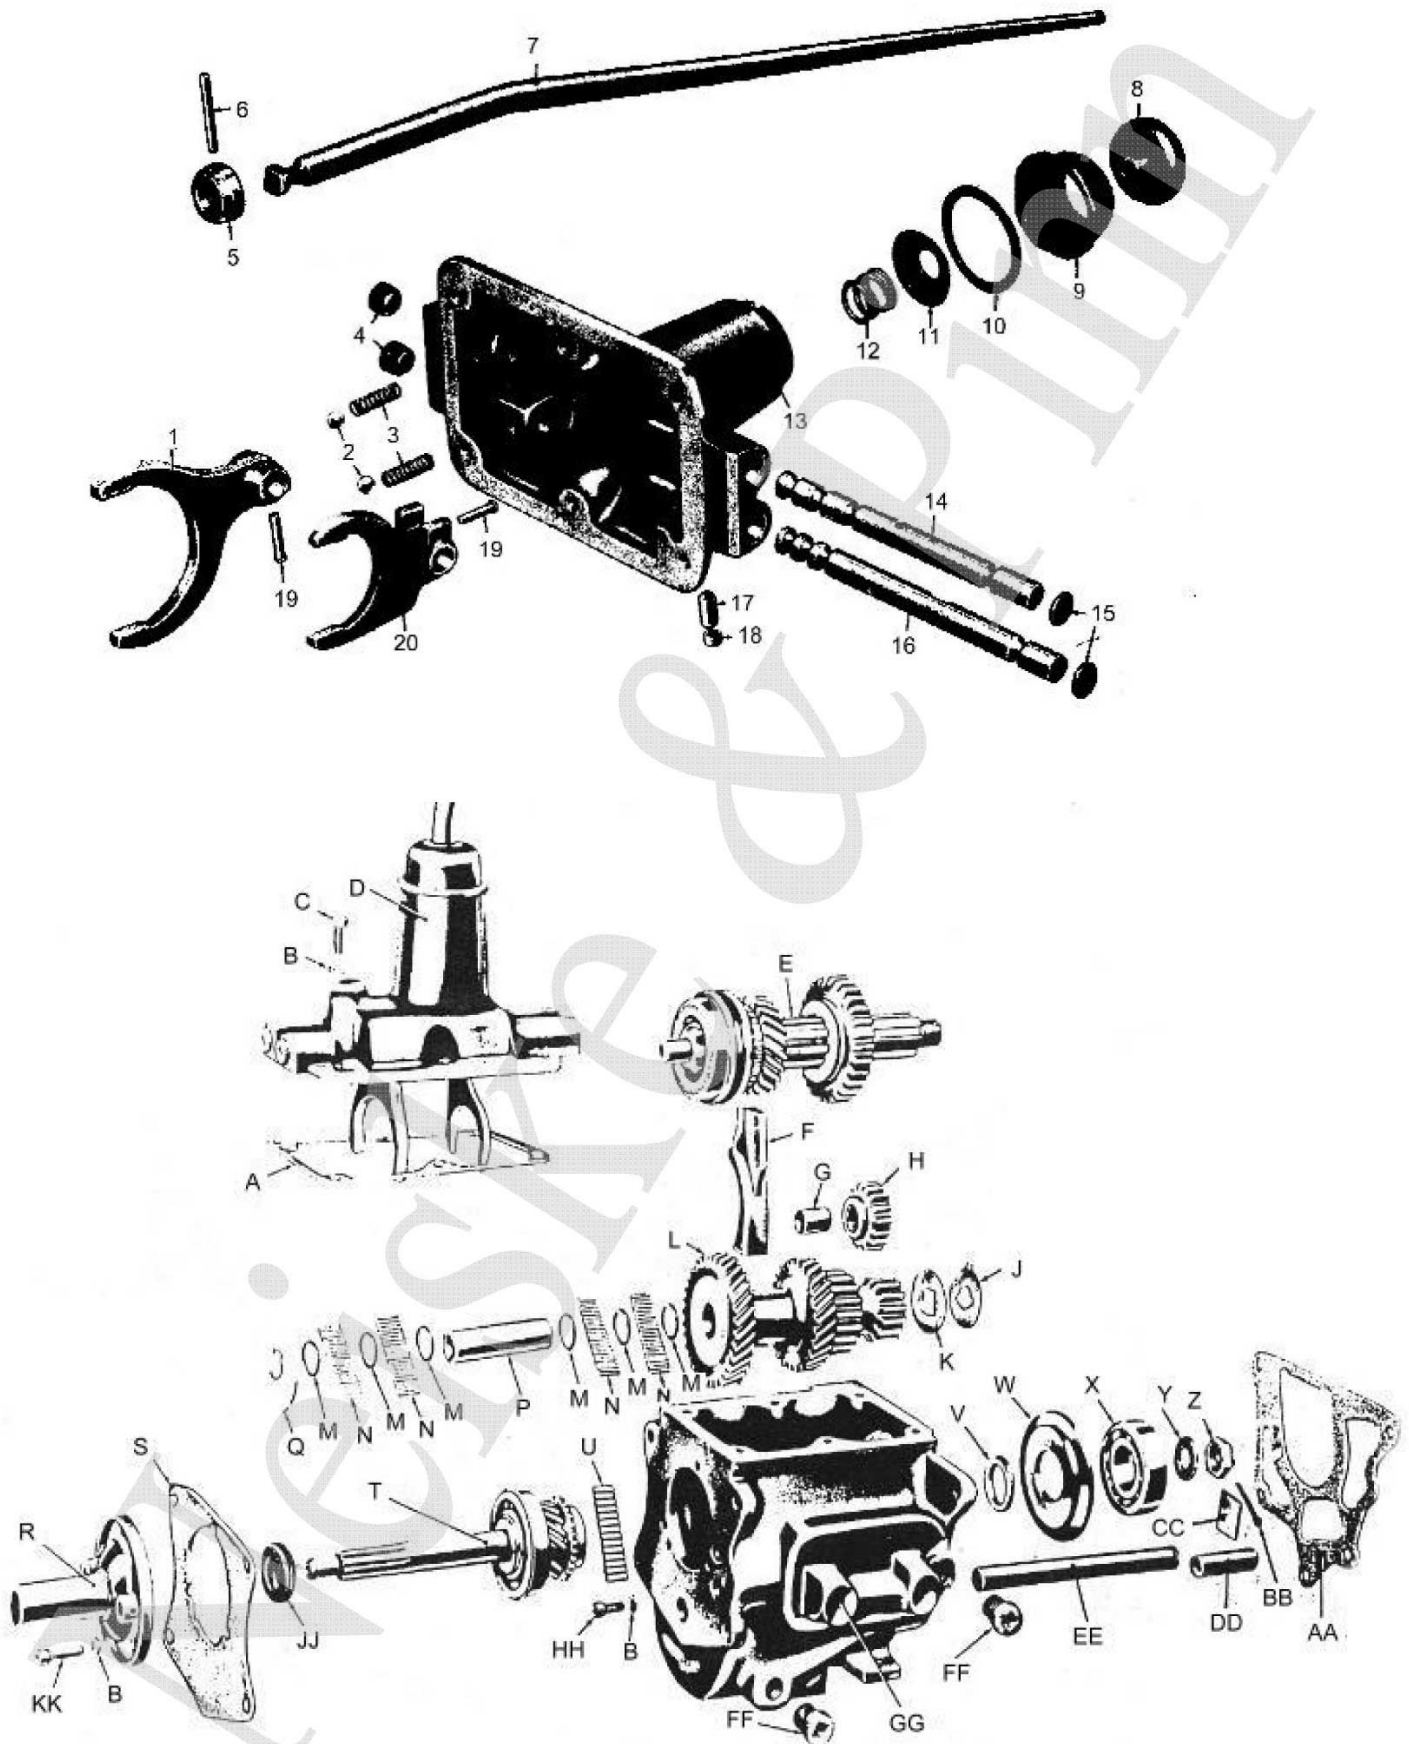 

Schaltgetriebe / Transmission

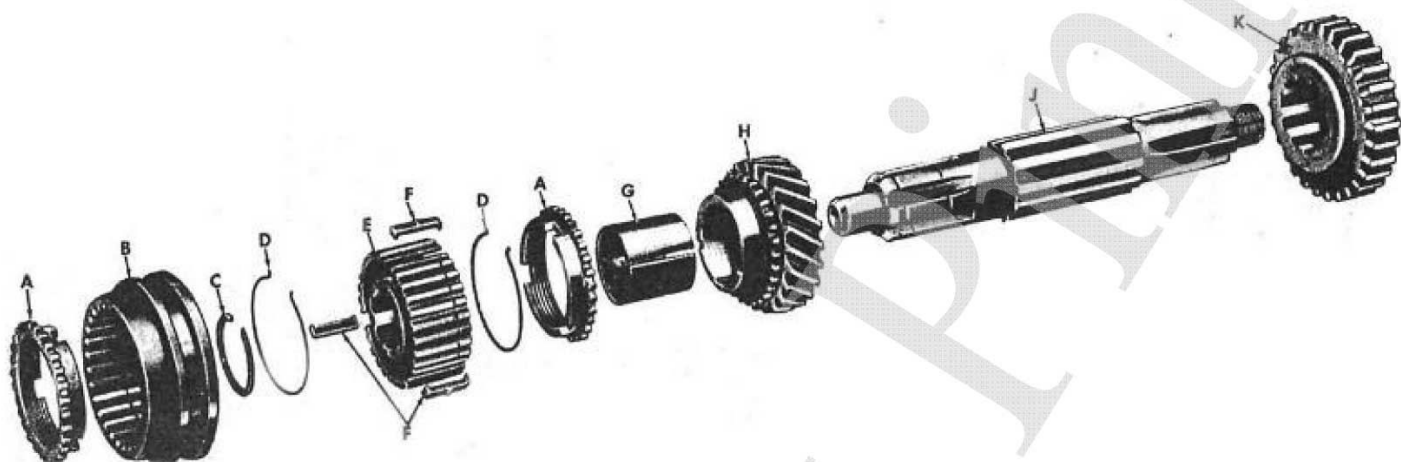 


 Getriebehauptwelle / Transmission main shaft

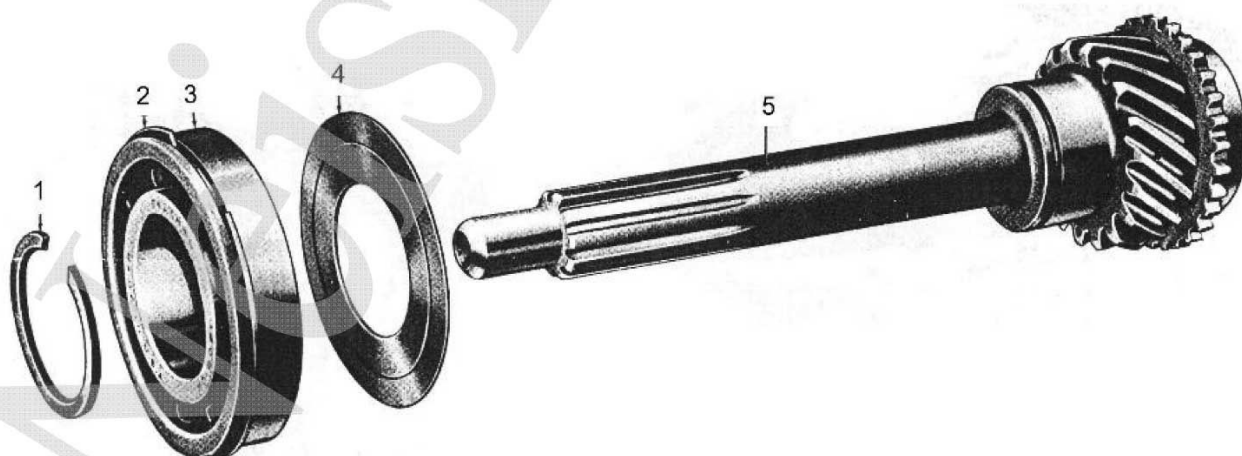


Getriebeeingangswelle / Transmission main drive

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

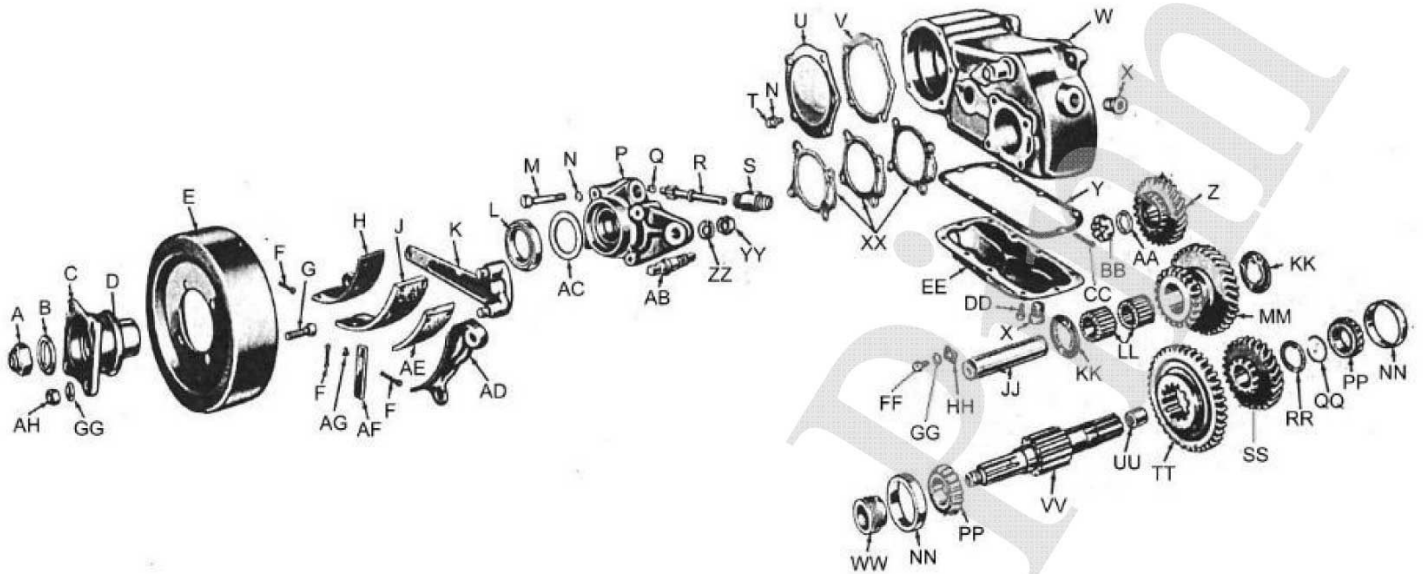


Untersetzungsgetriebe / Transfer case

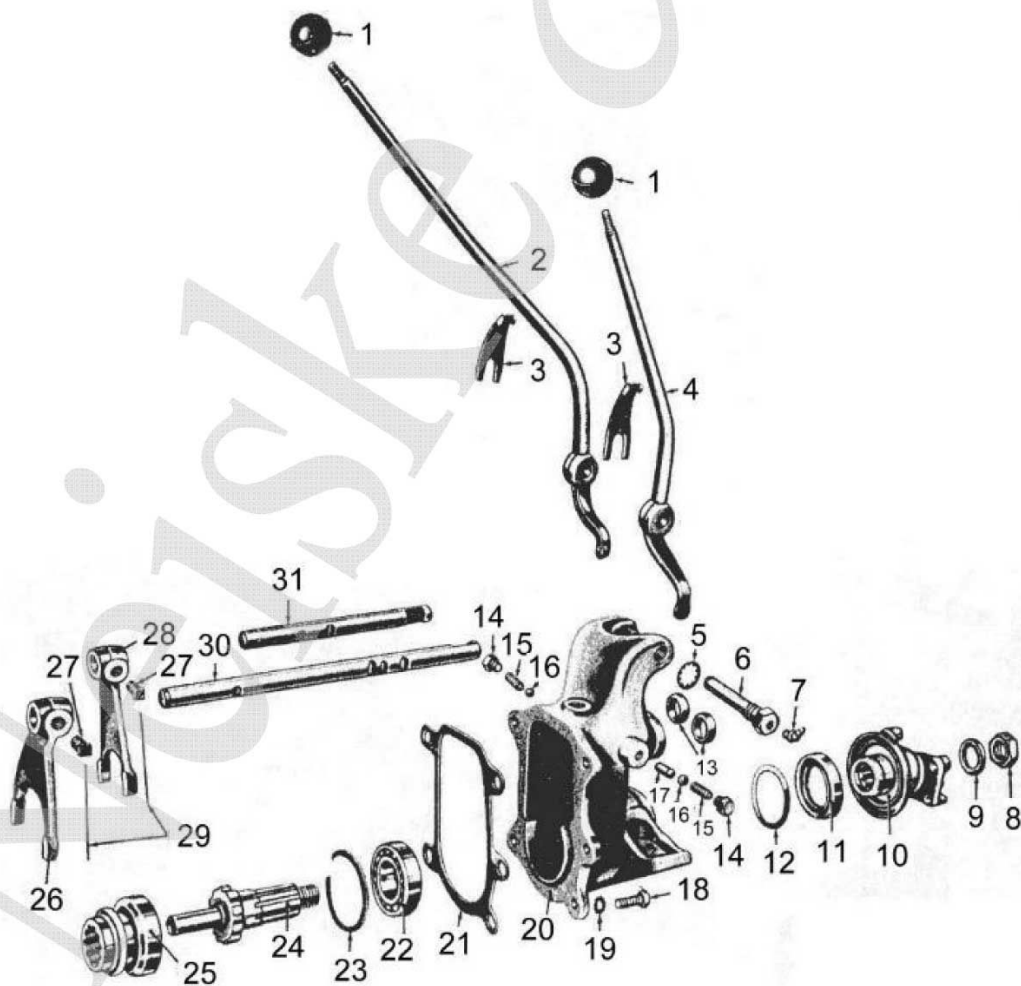 

 
Gehäuse Allradschaltung / Transfer case lever housing

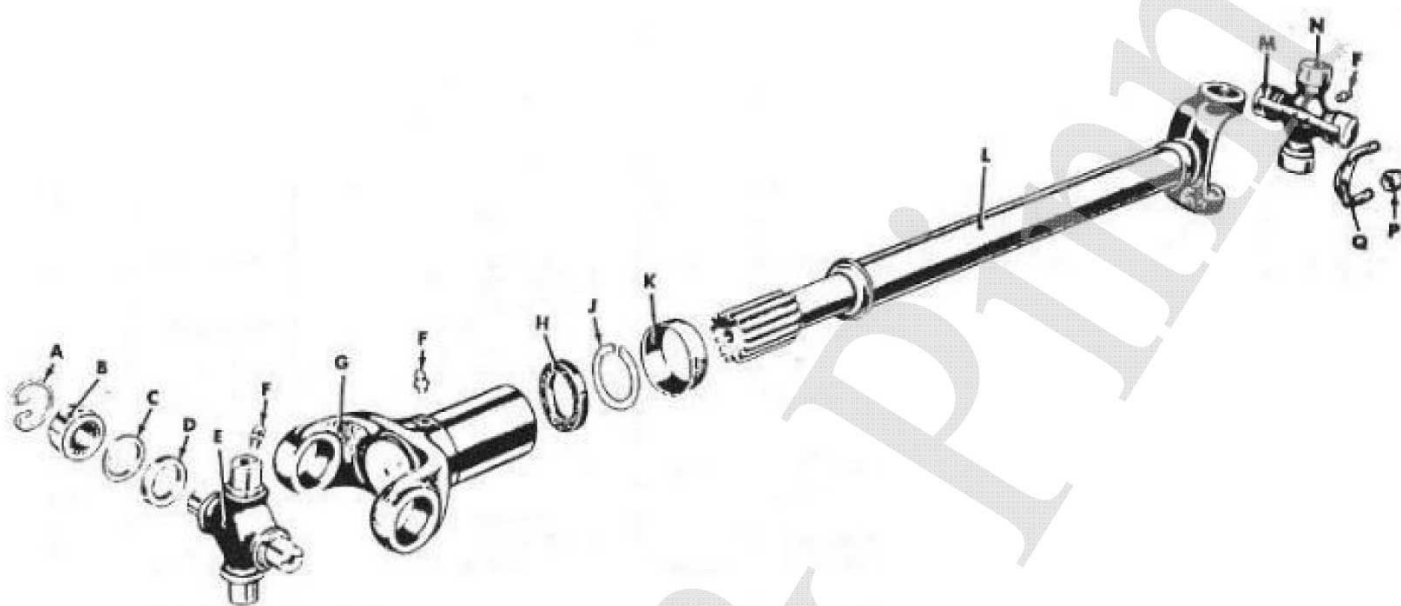

 
Kardanwelle vorn / Propeller shaft front

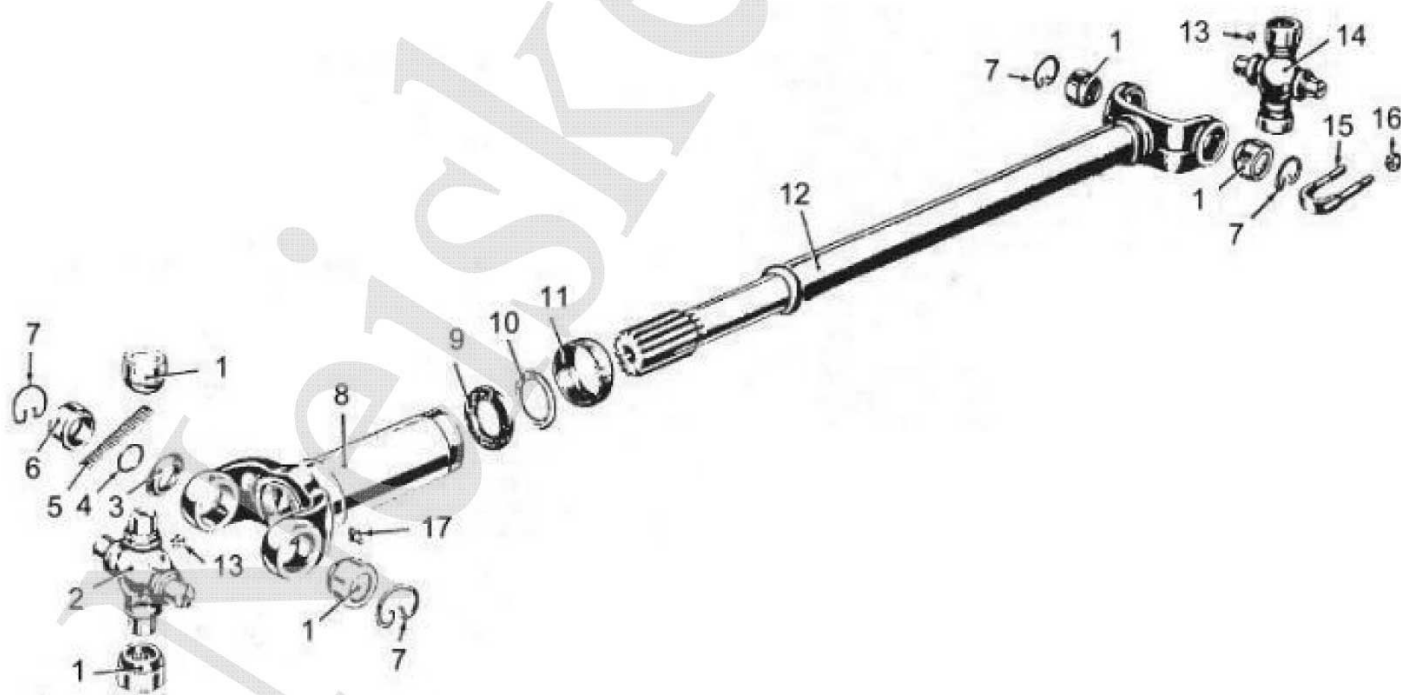

 
Kardanwelle hinten / Propeller shaft rear

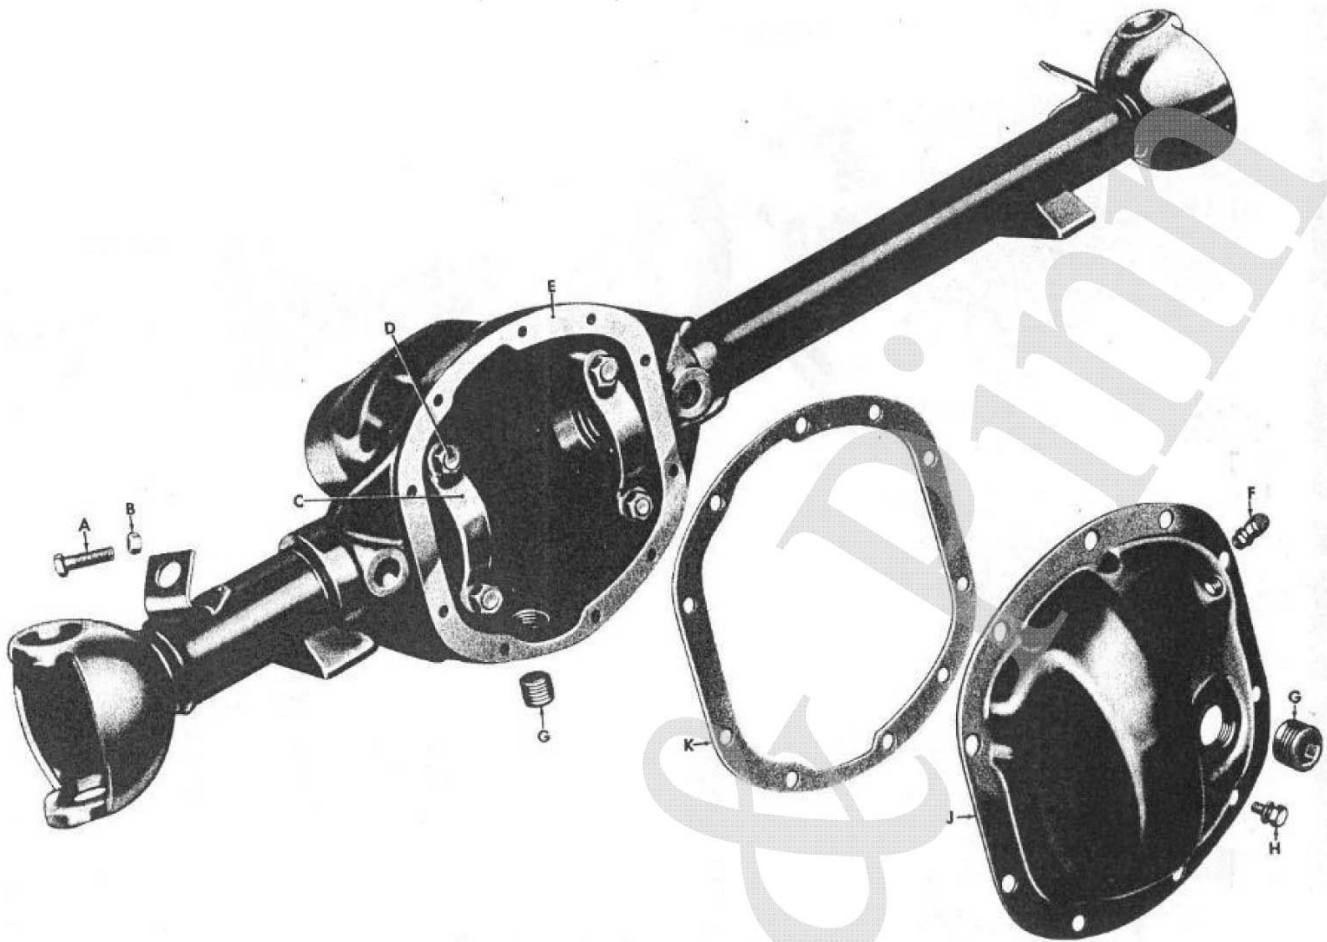


Vorderachse / Front axle

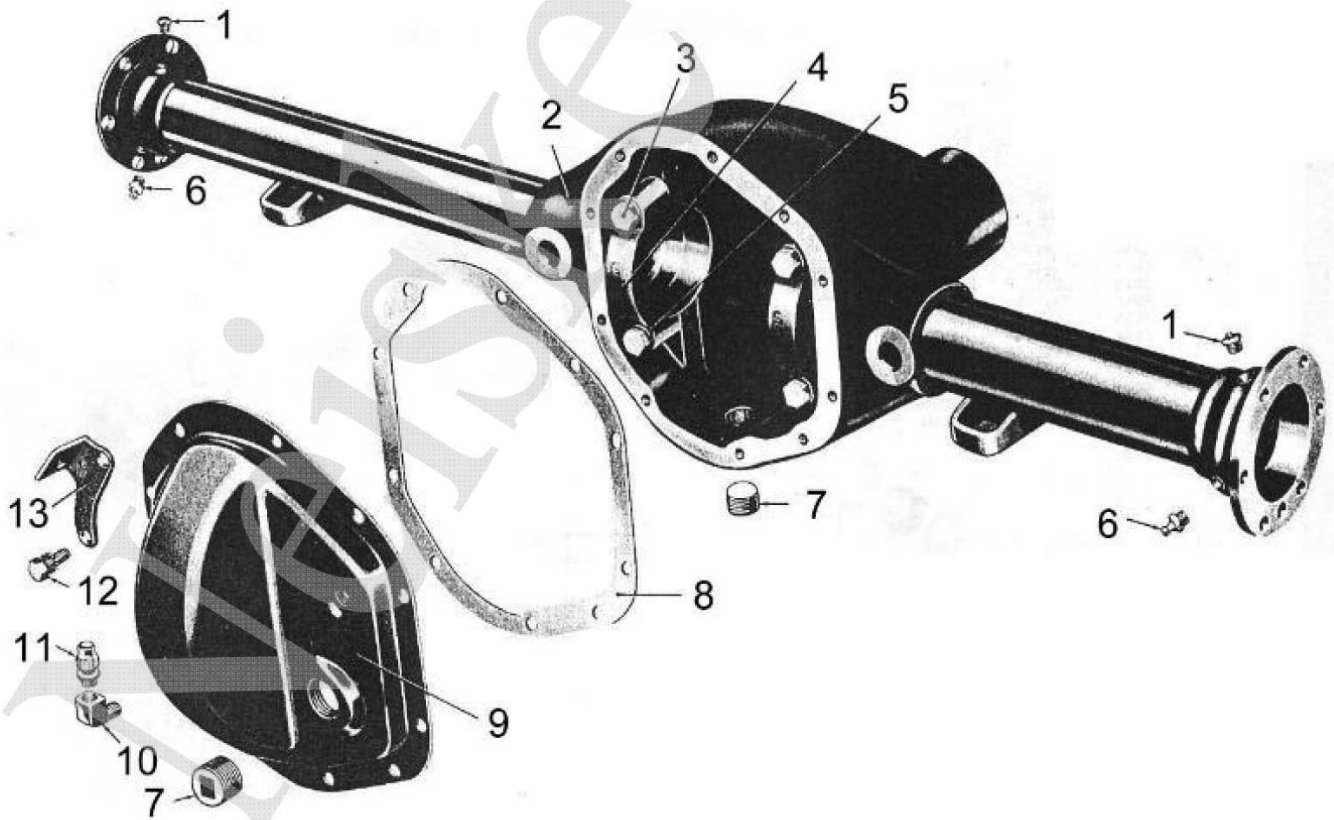 


Hinterachse / Rear axle

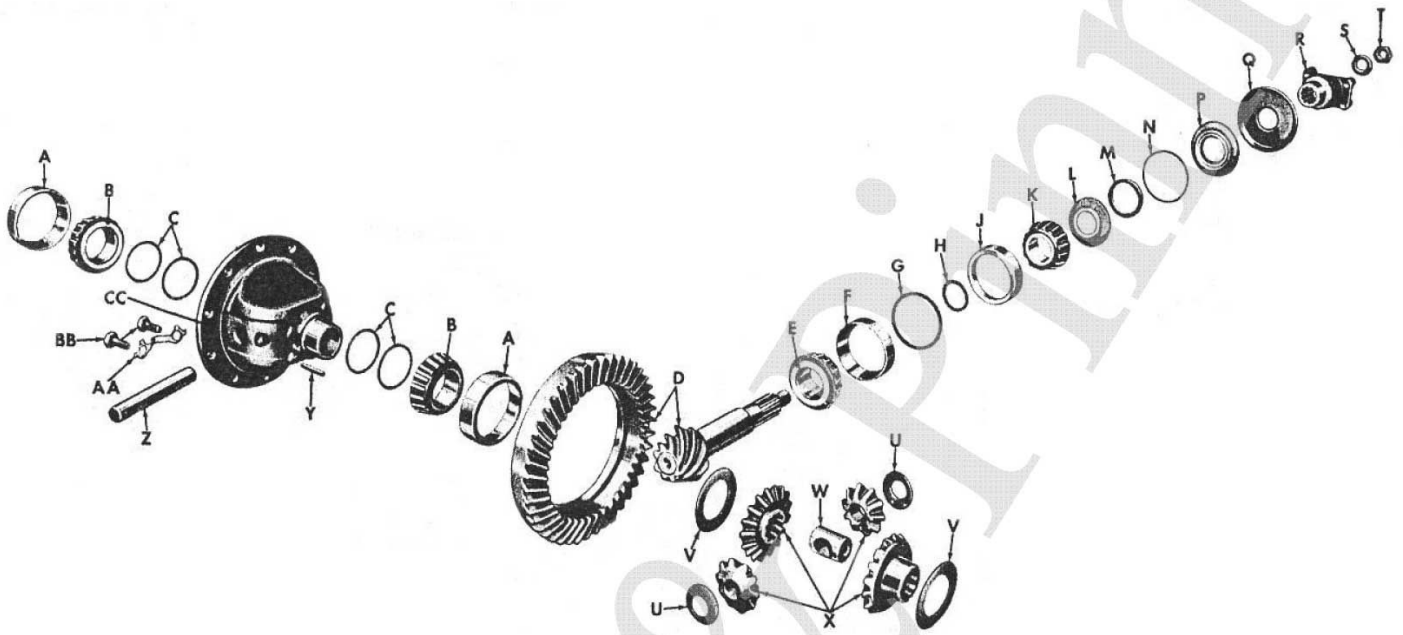 

 
Differential hinten / Rear axle differential

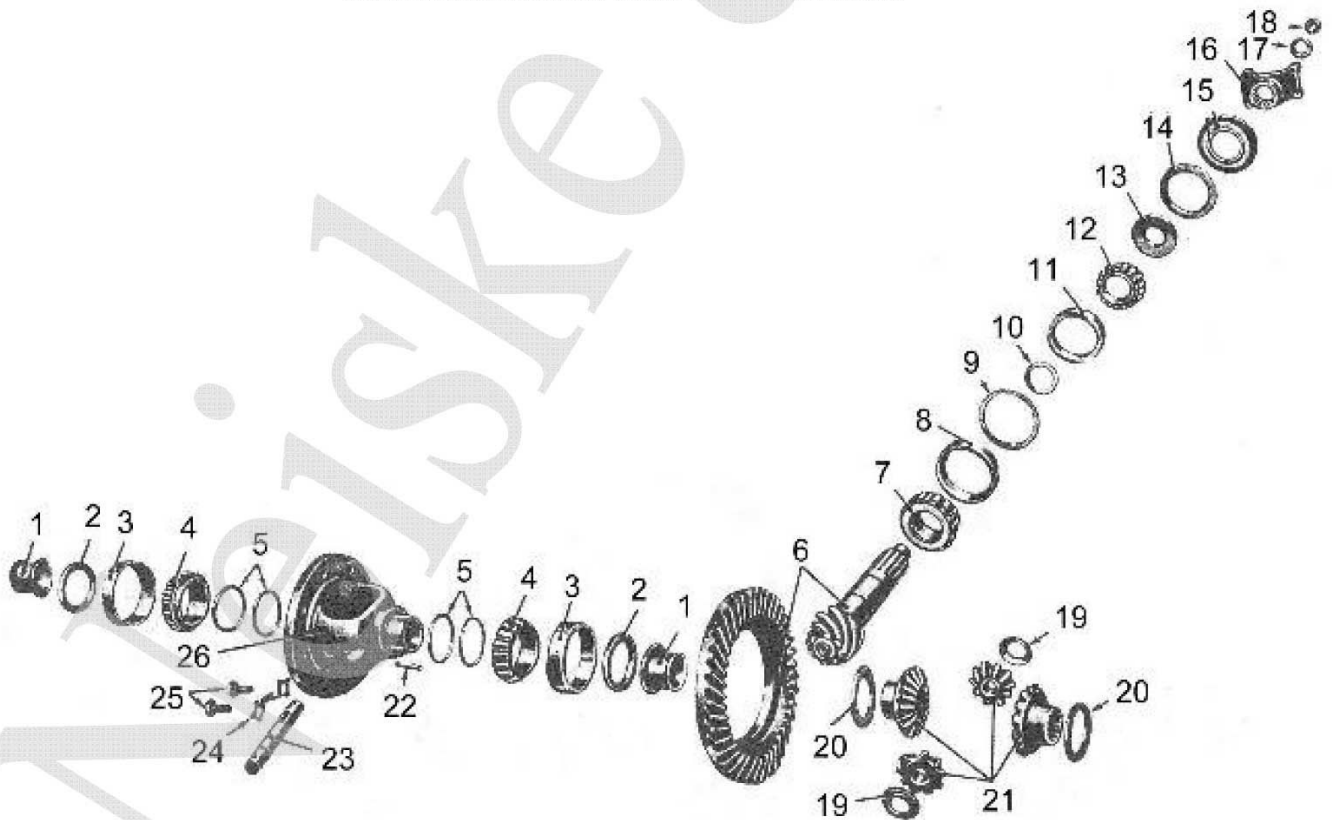

 Differential vorn / Front axle differential

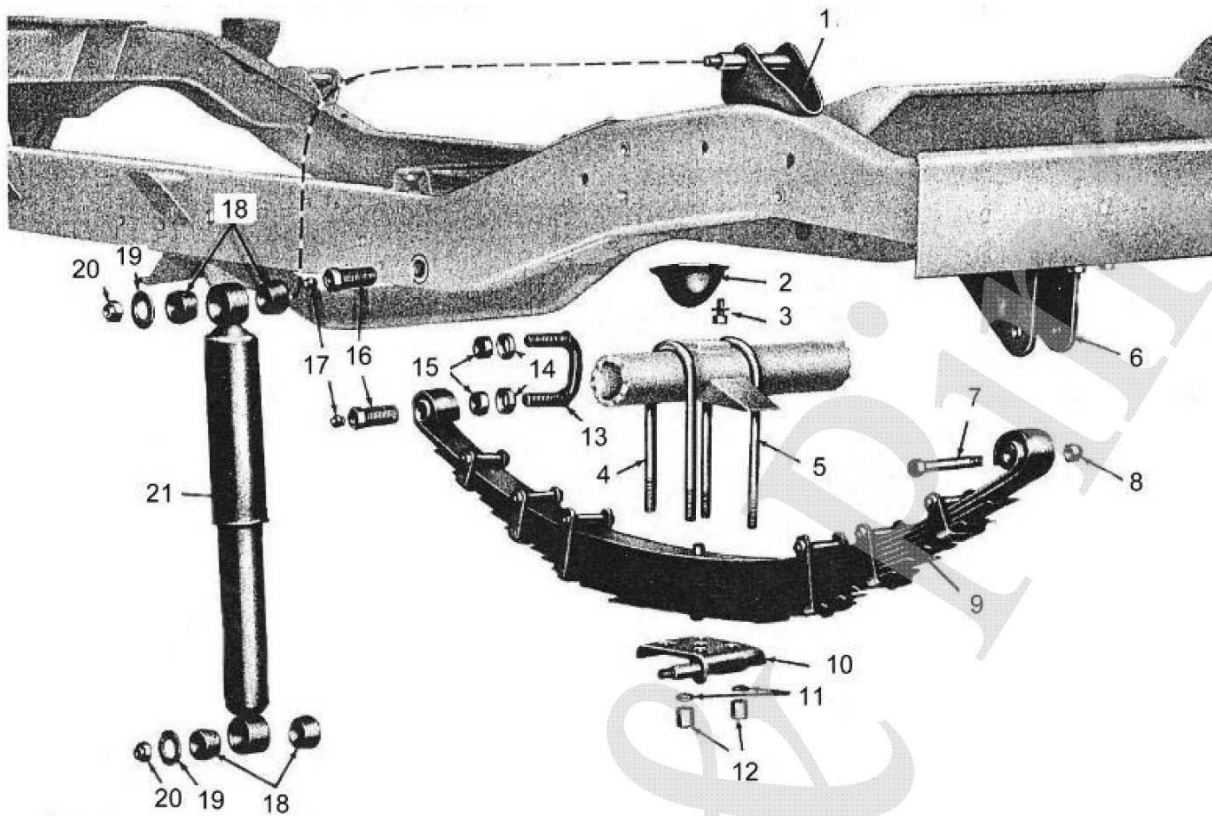


Blattfeder vorn / Front spring

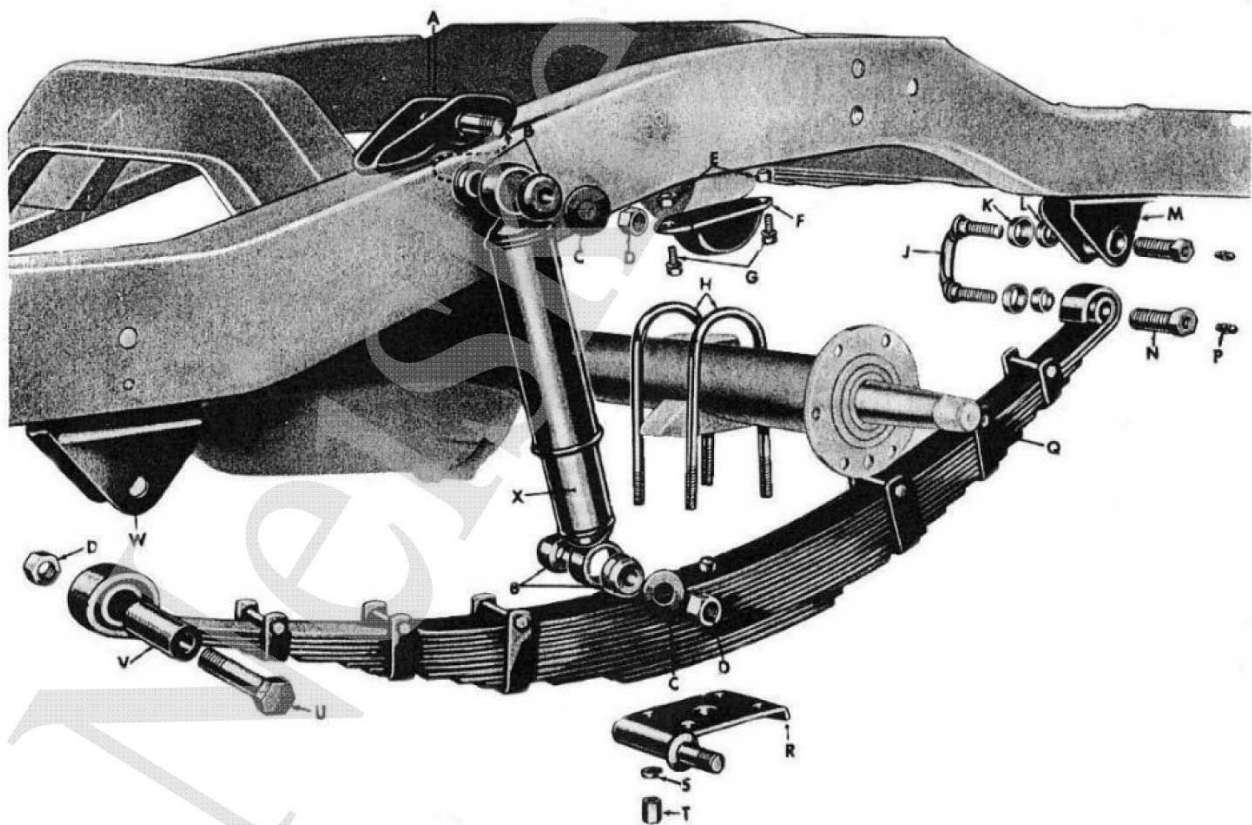 

Blattfeder hinten / Rear spring

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

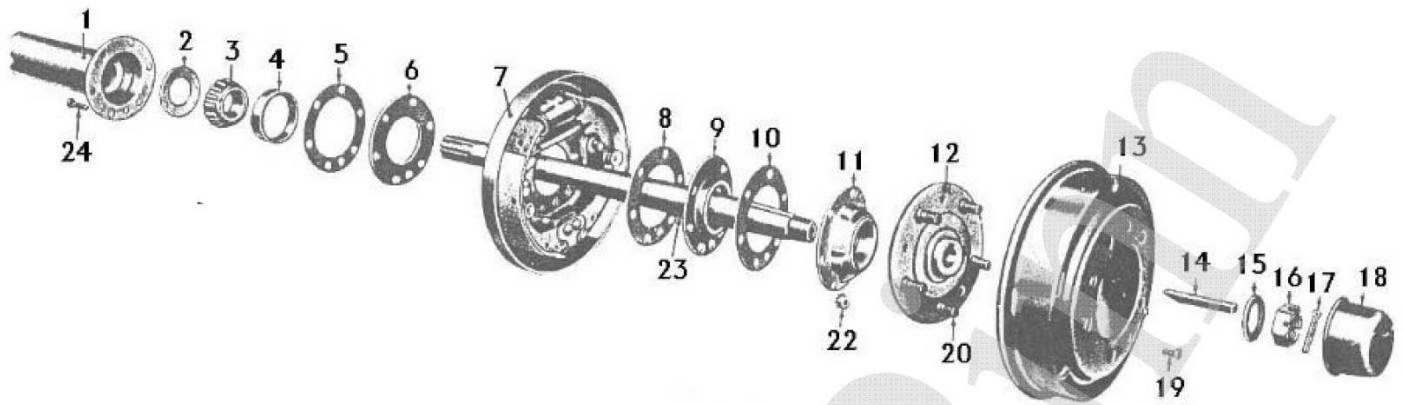


Hinterrad / Rear wheel connection parts



 
Vorderrad / Front wheel connection parts

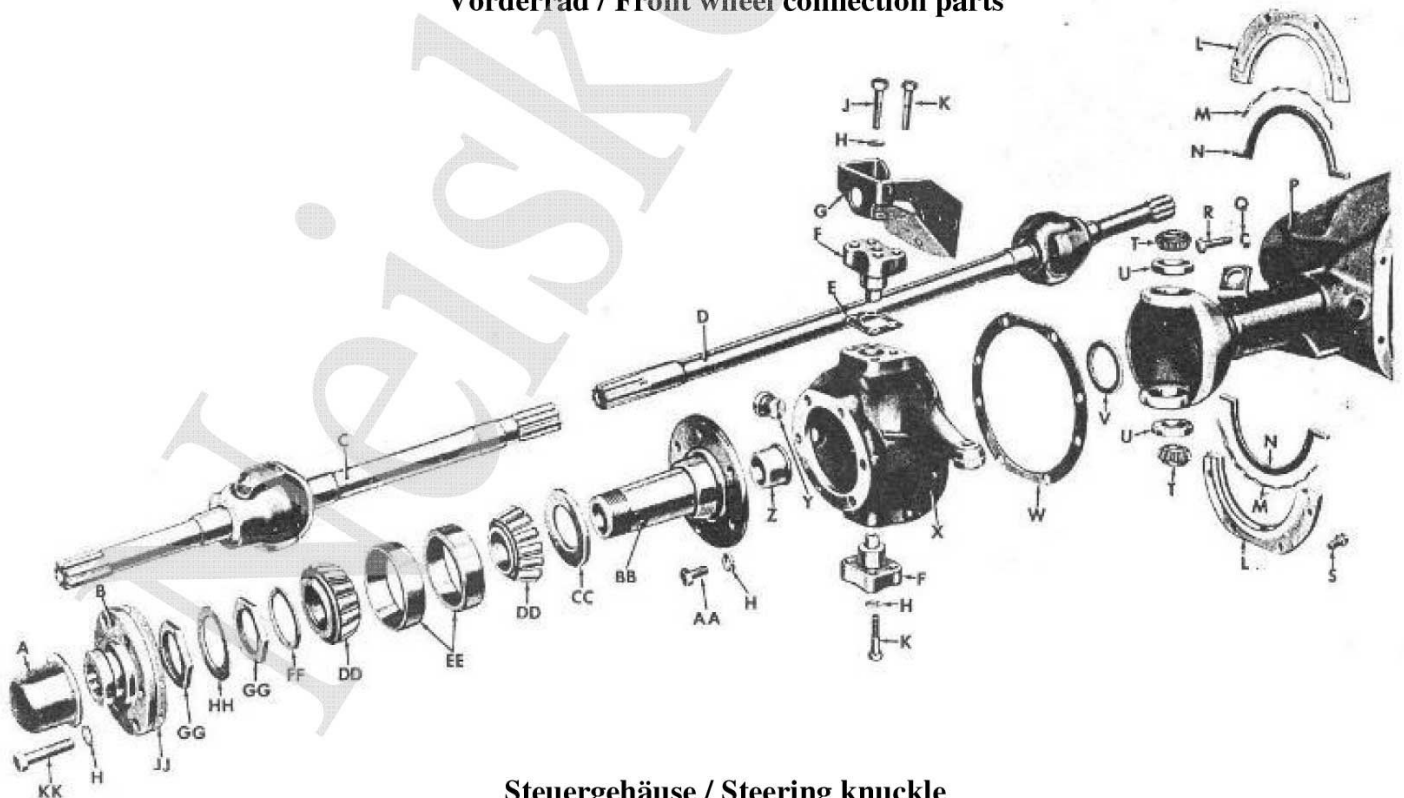


Steuergehäuse / Steering knuckle

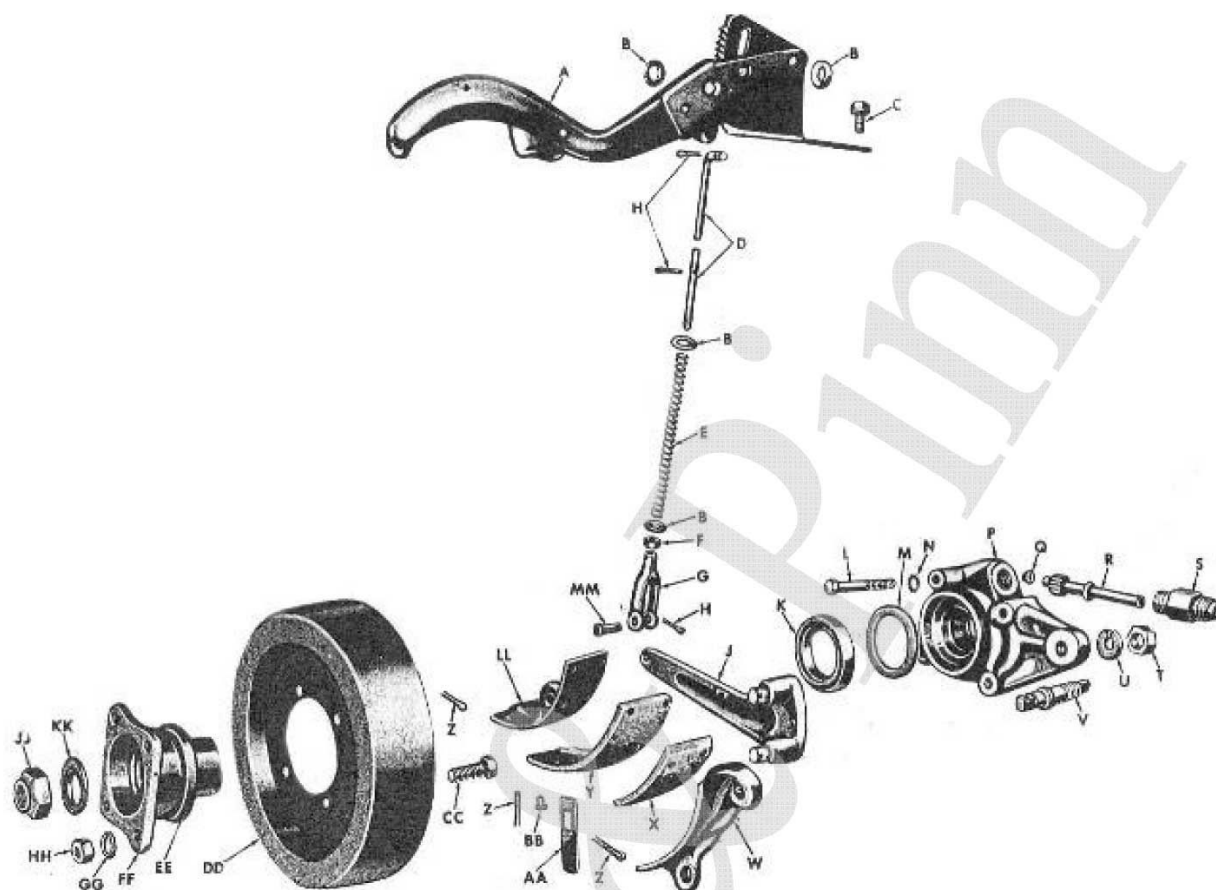 


Handbremse / Hand brake

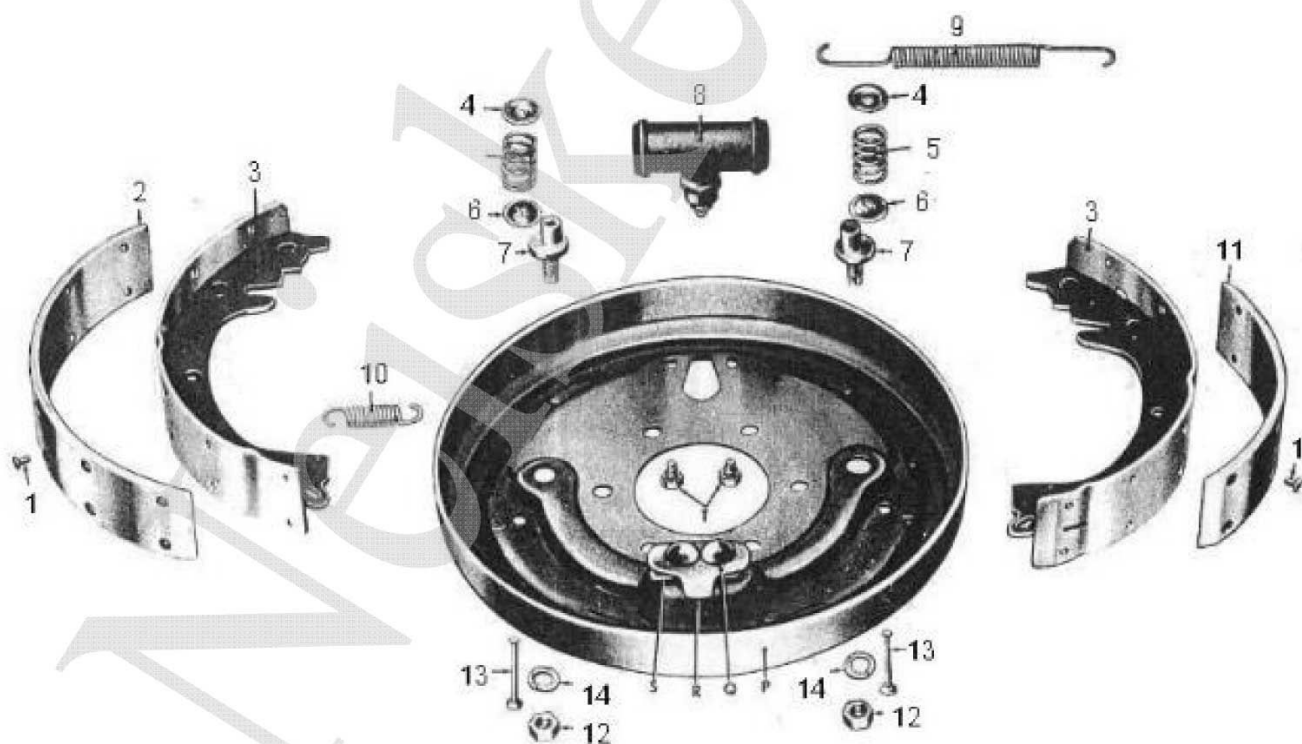 


Bremse / Brake

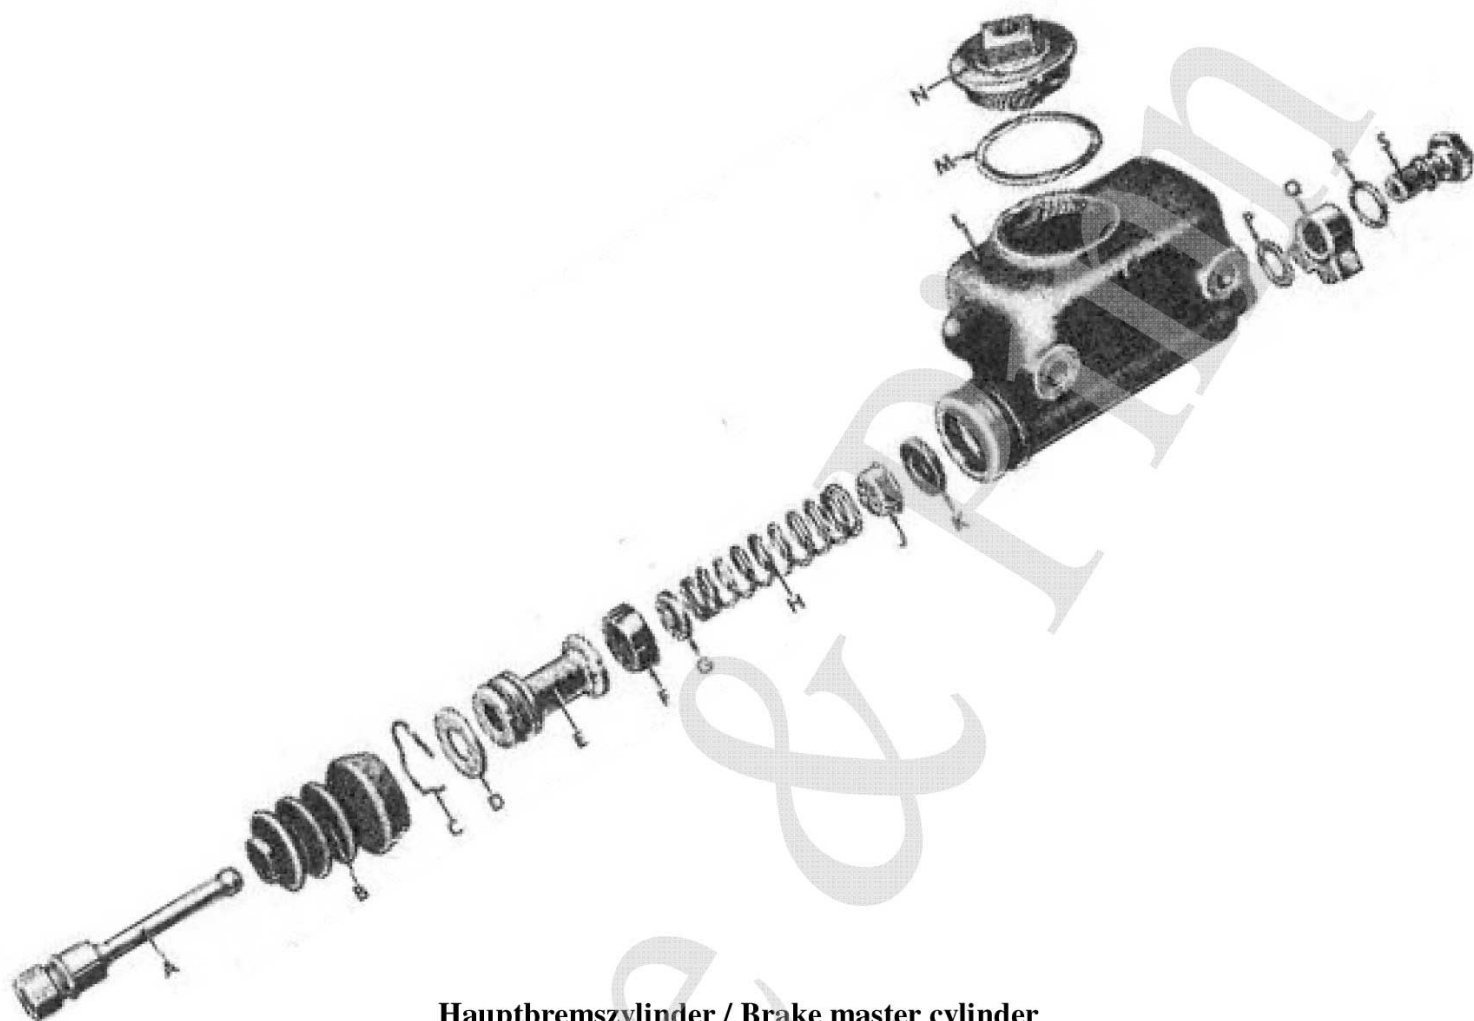 

 
Hauptbremszylinder / Brake master cylinder

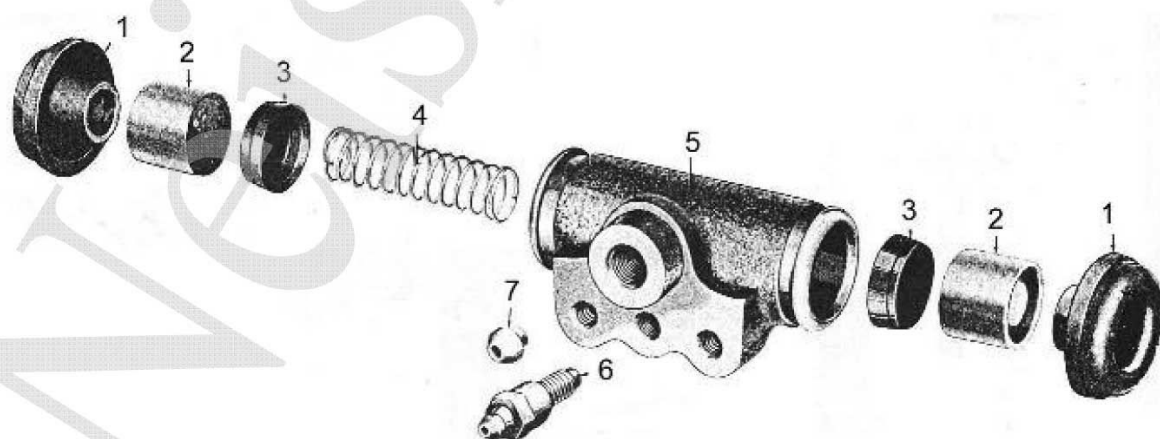


Radbremszylinder / Brake wheel cylinder

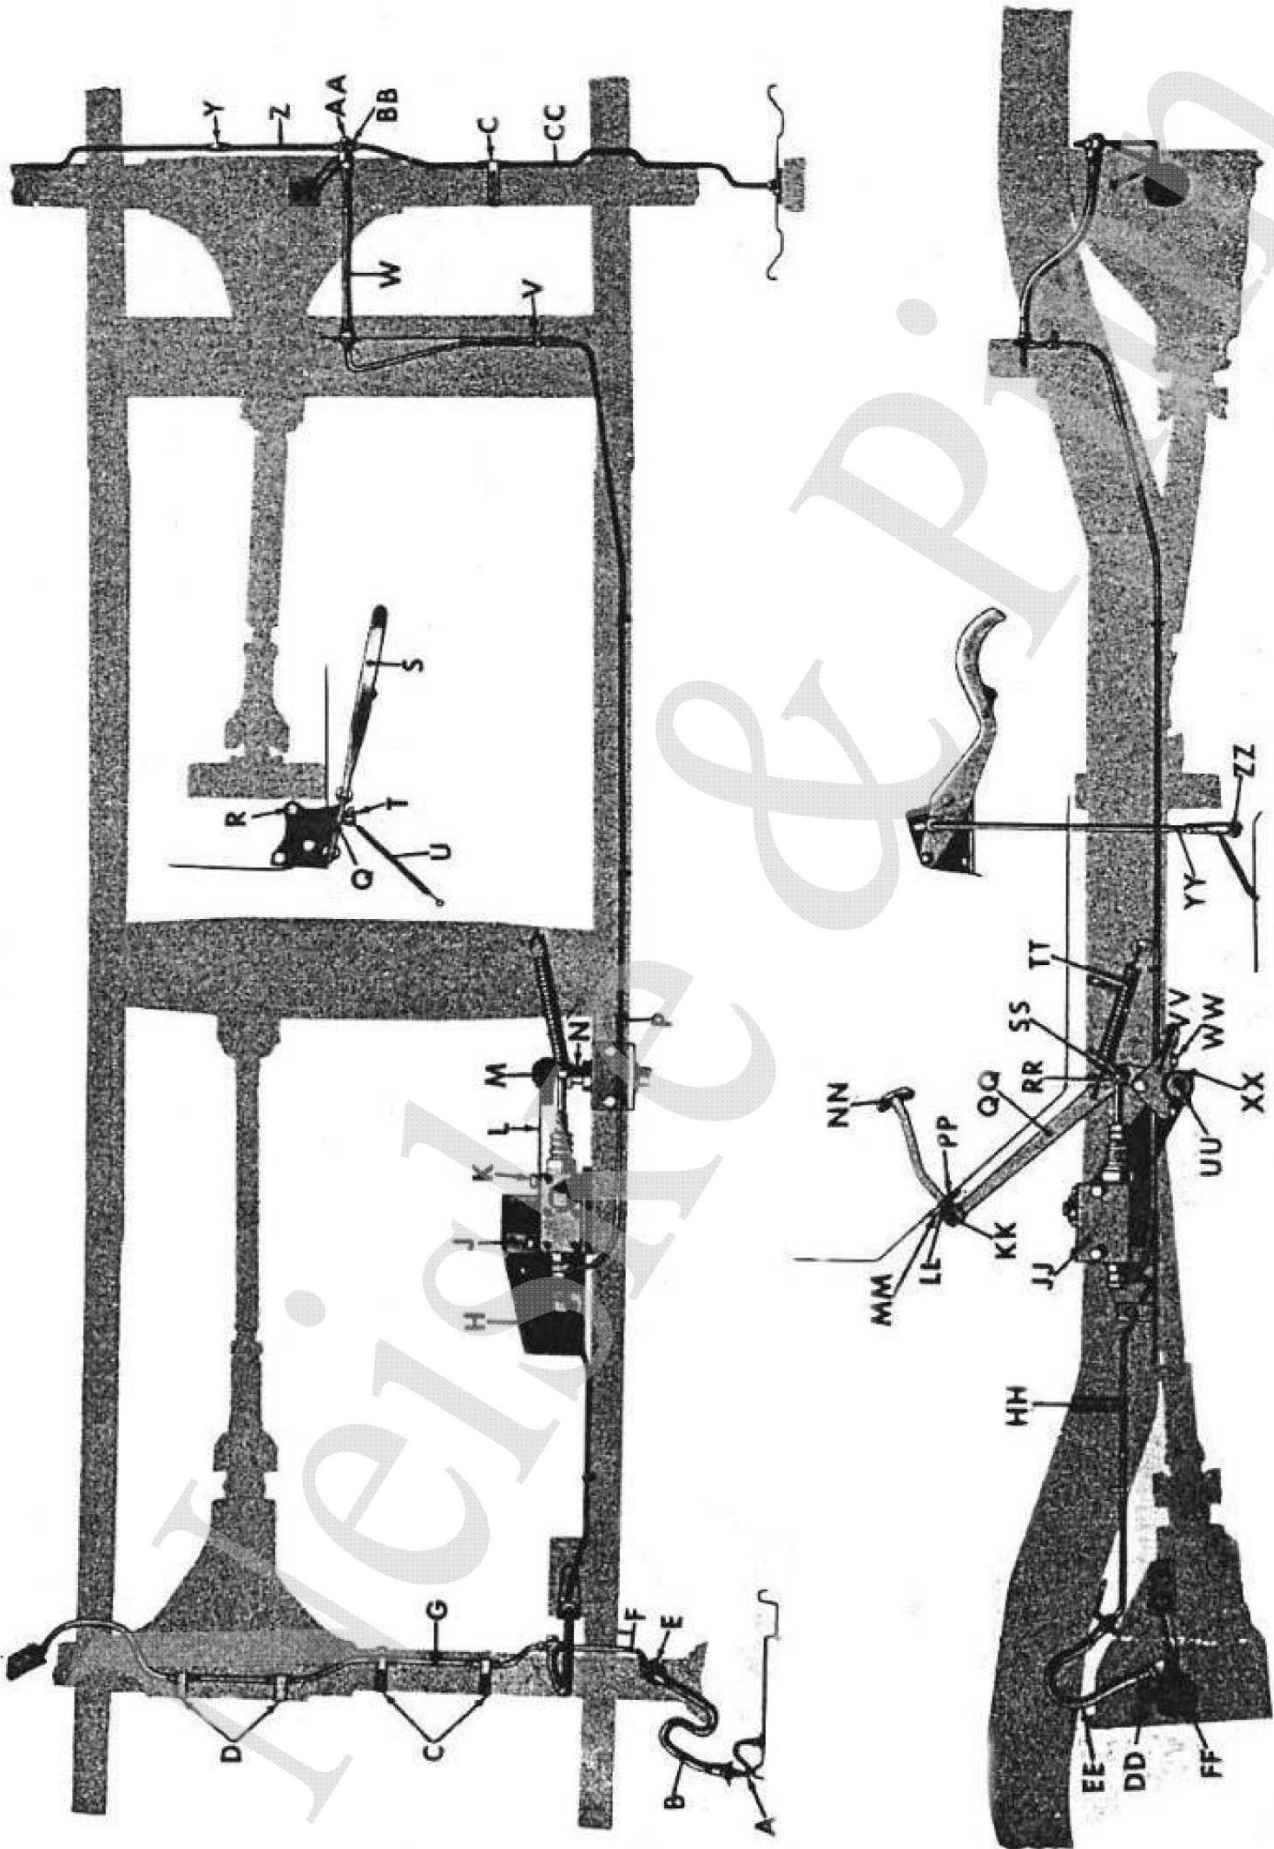 


Bremssystem / Brake system

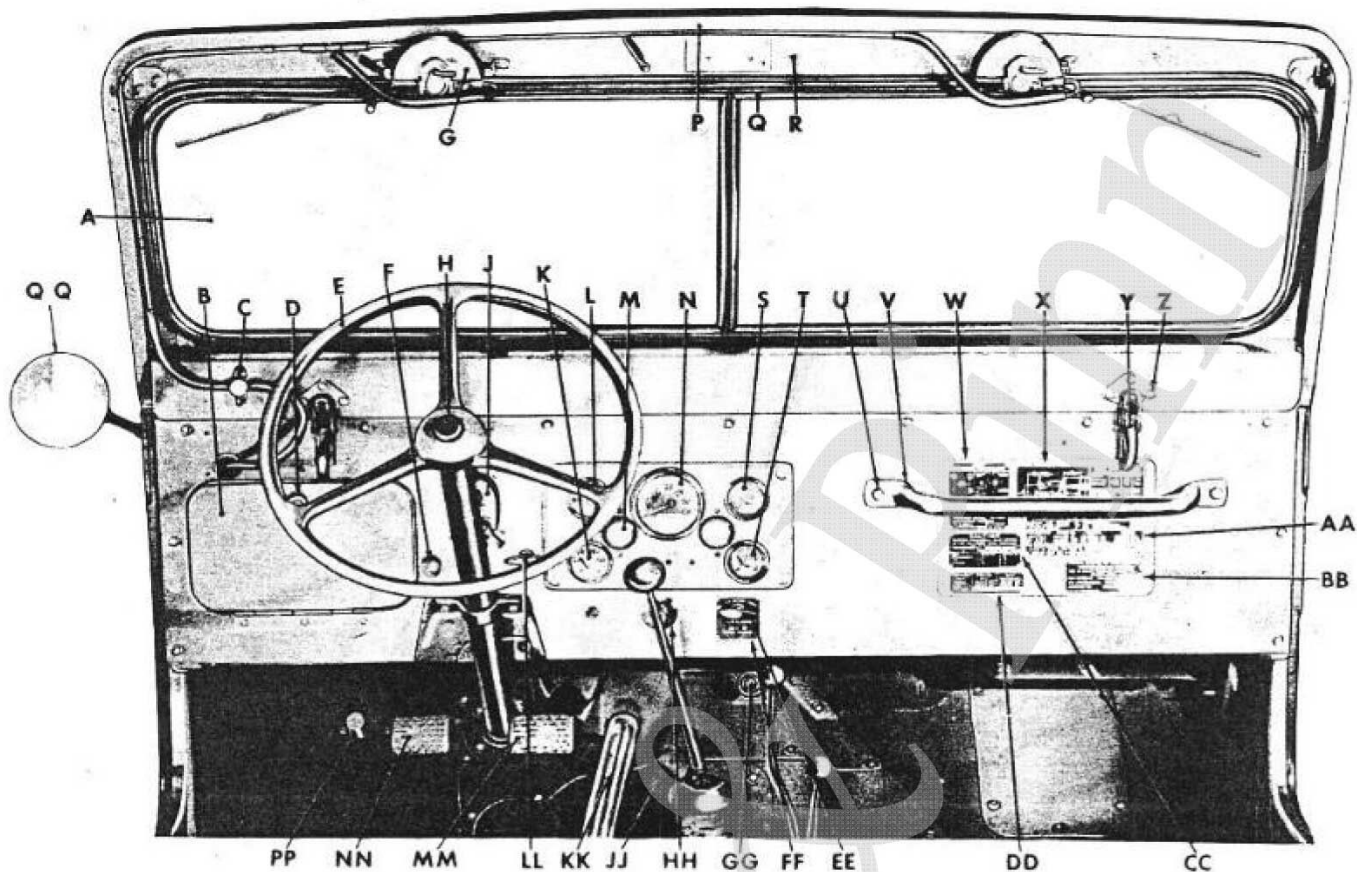 


Armaturenbrett / Front compartment

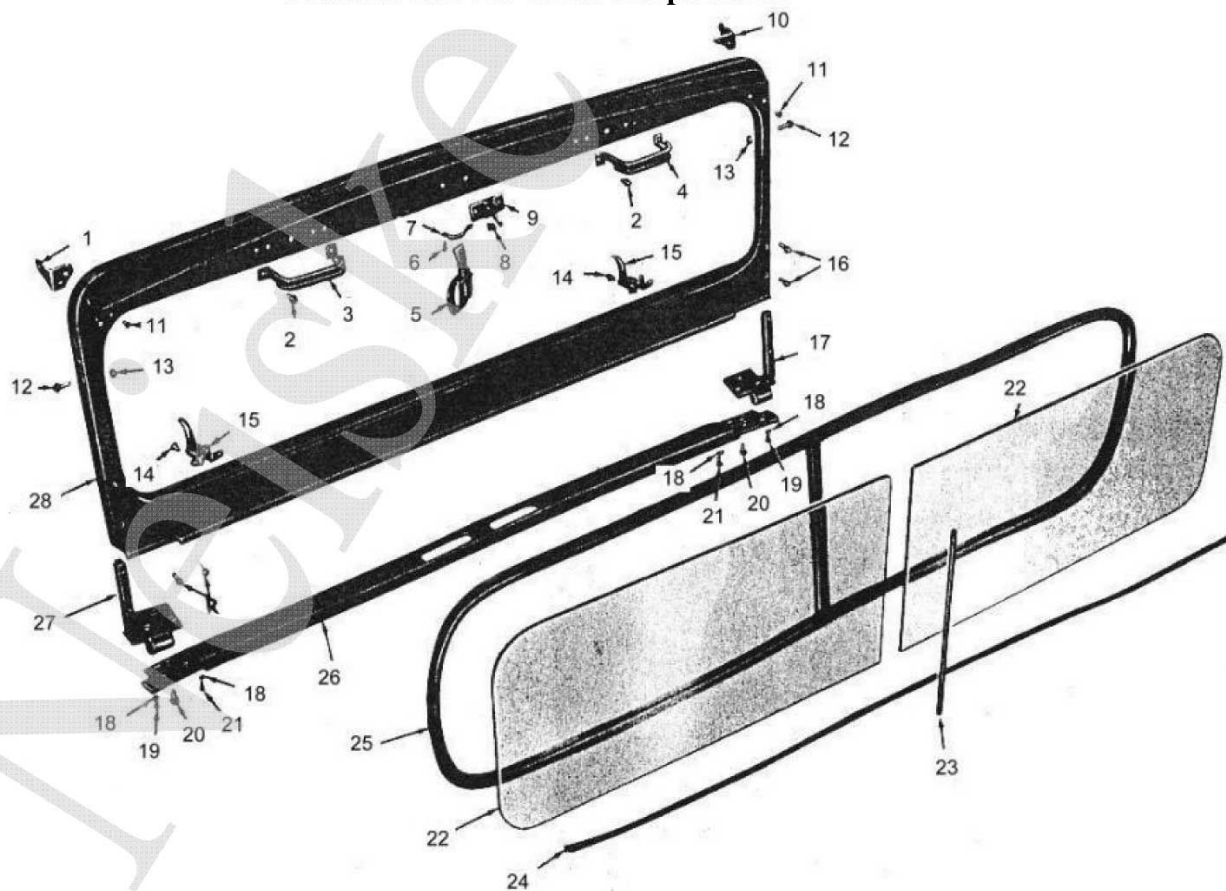 

 Scheibenrahmen / Windshield and related parts

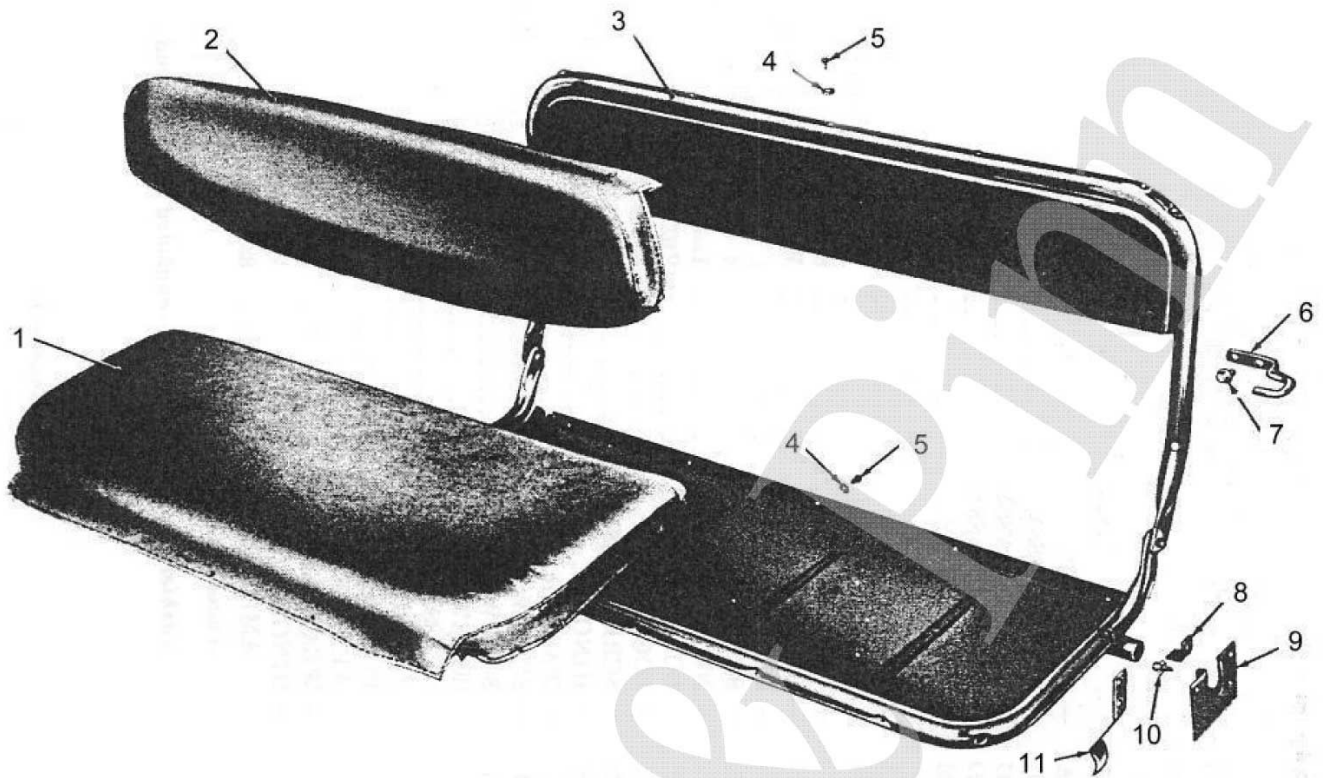


Sitzbank hinten / Seat rear

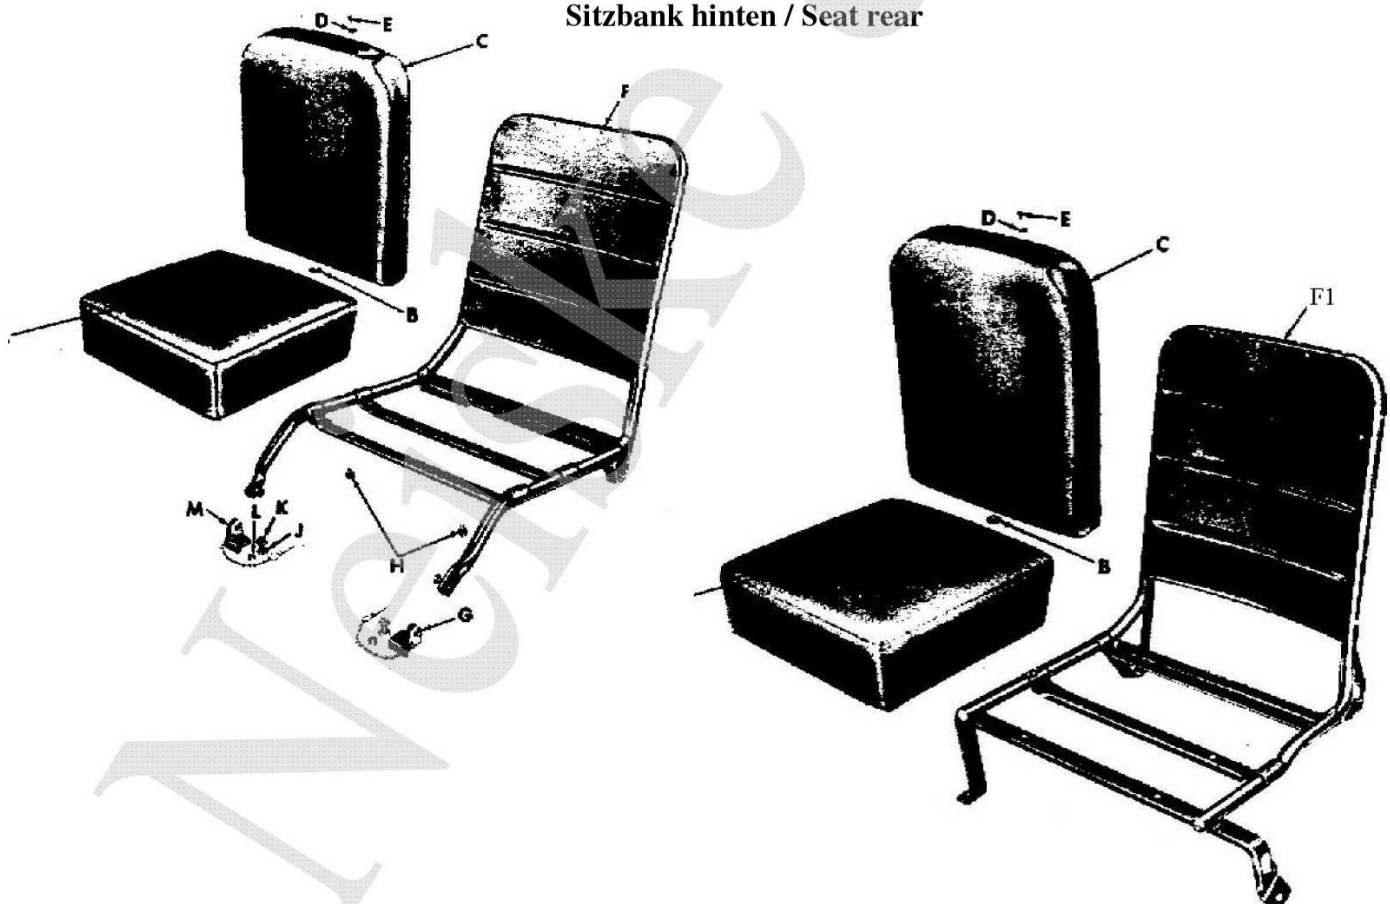 


Sitz vorn / Seat front

 
TRUCK; 1/4 TON; 4X4 WILLYS MODEL M38A1

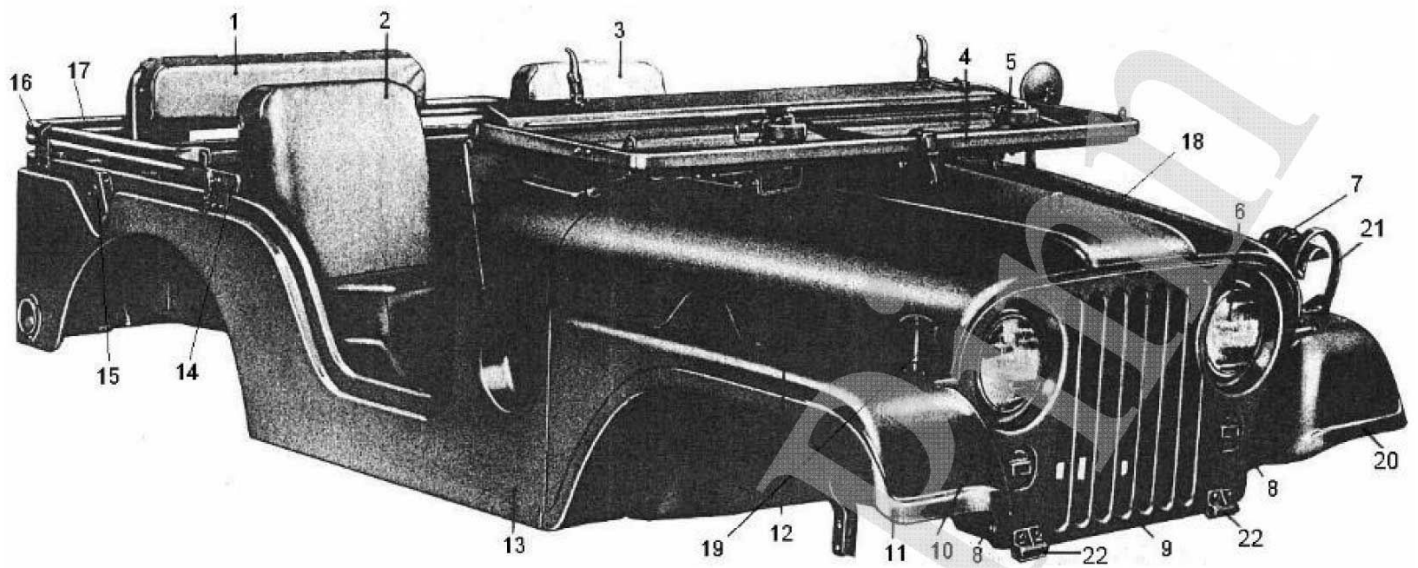


Karosse vorn / Body front

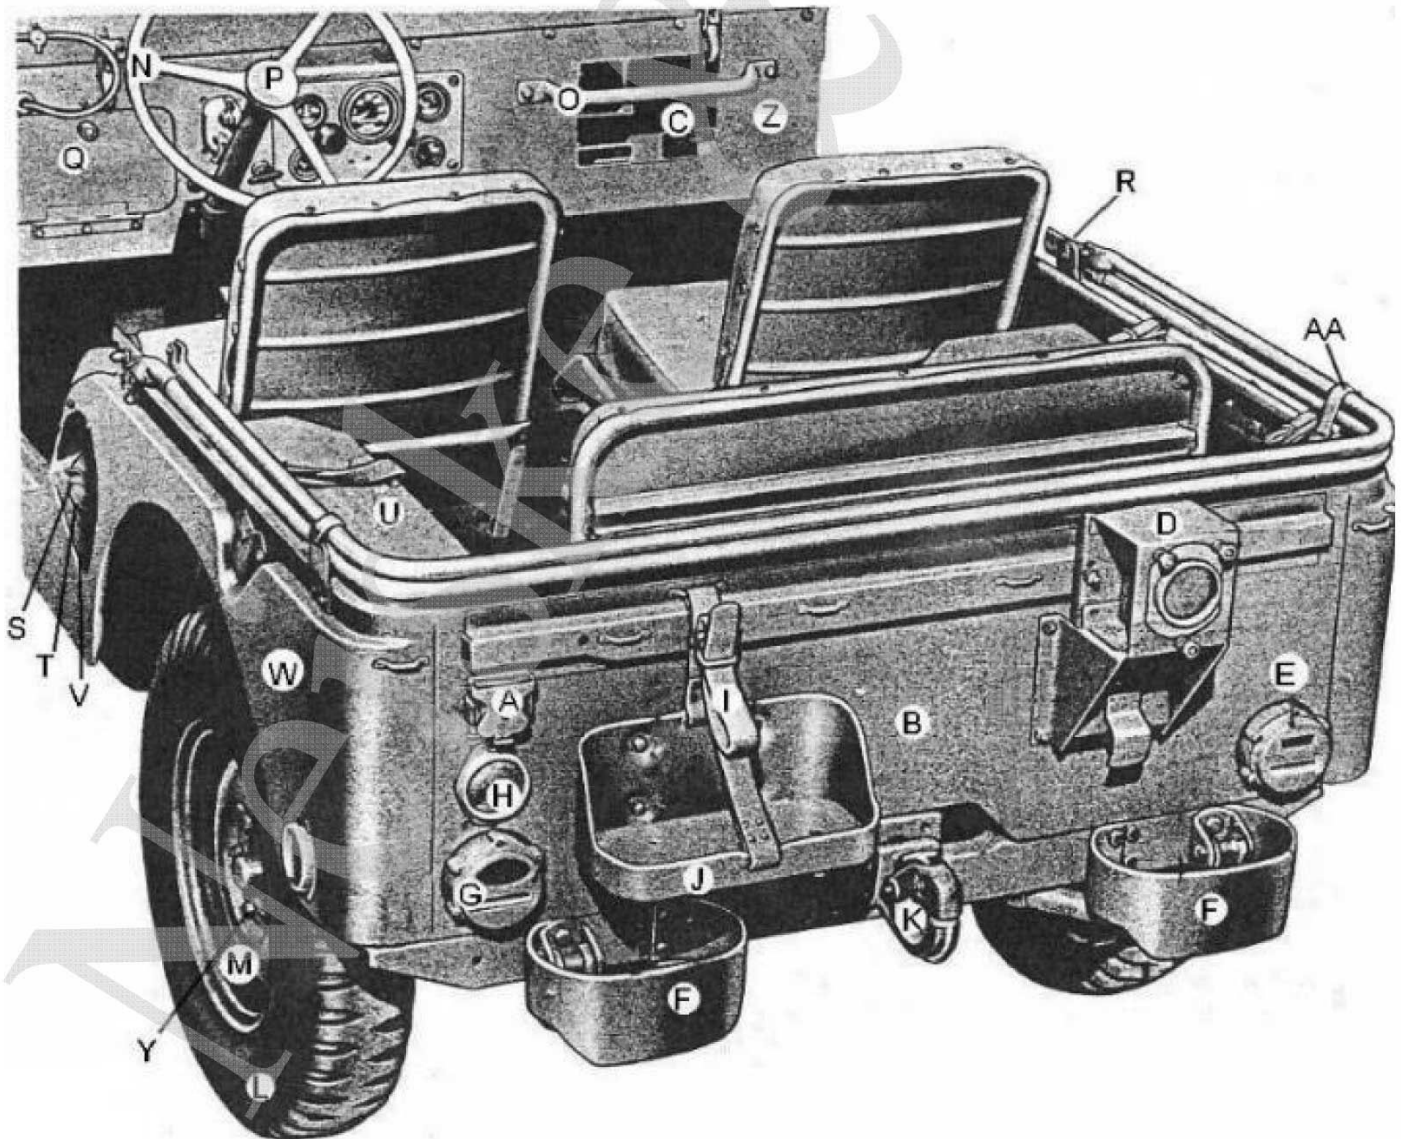 


Karosse hinten / Body rear

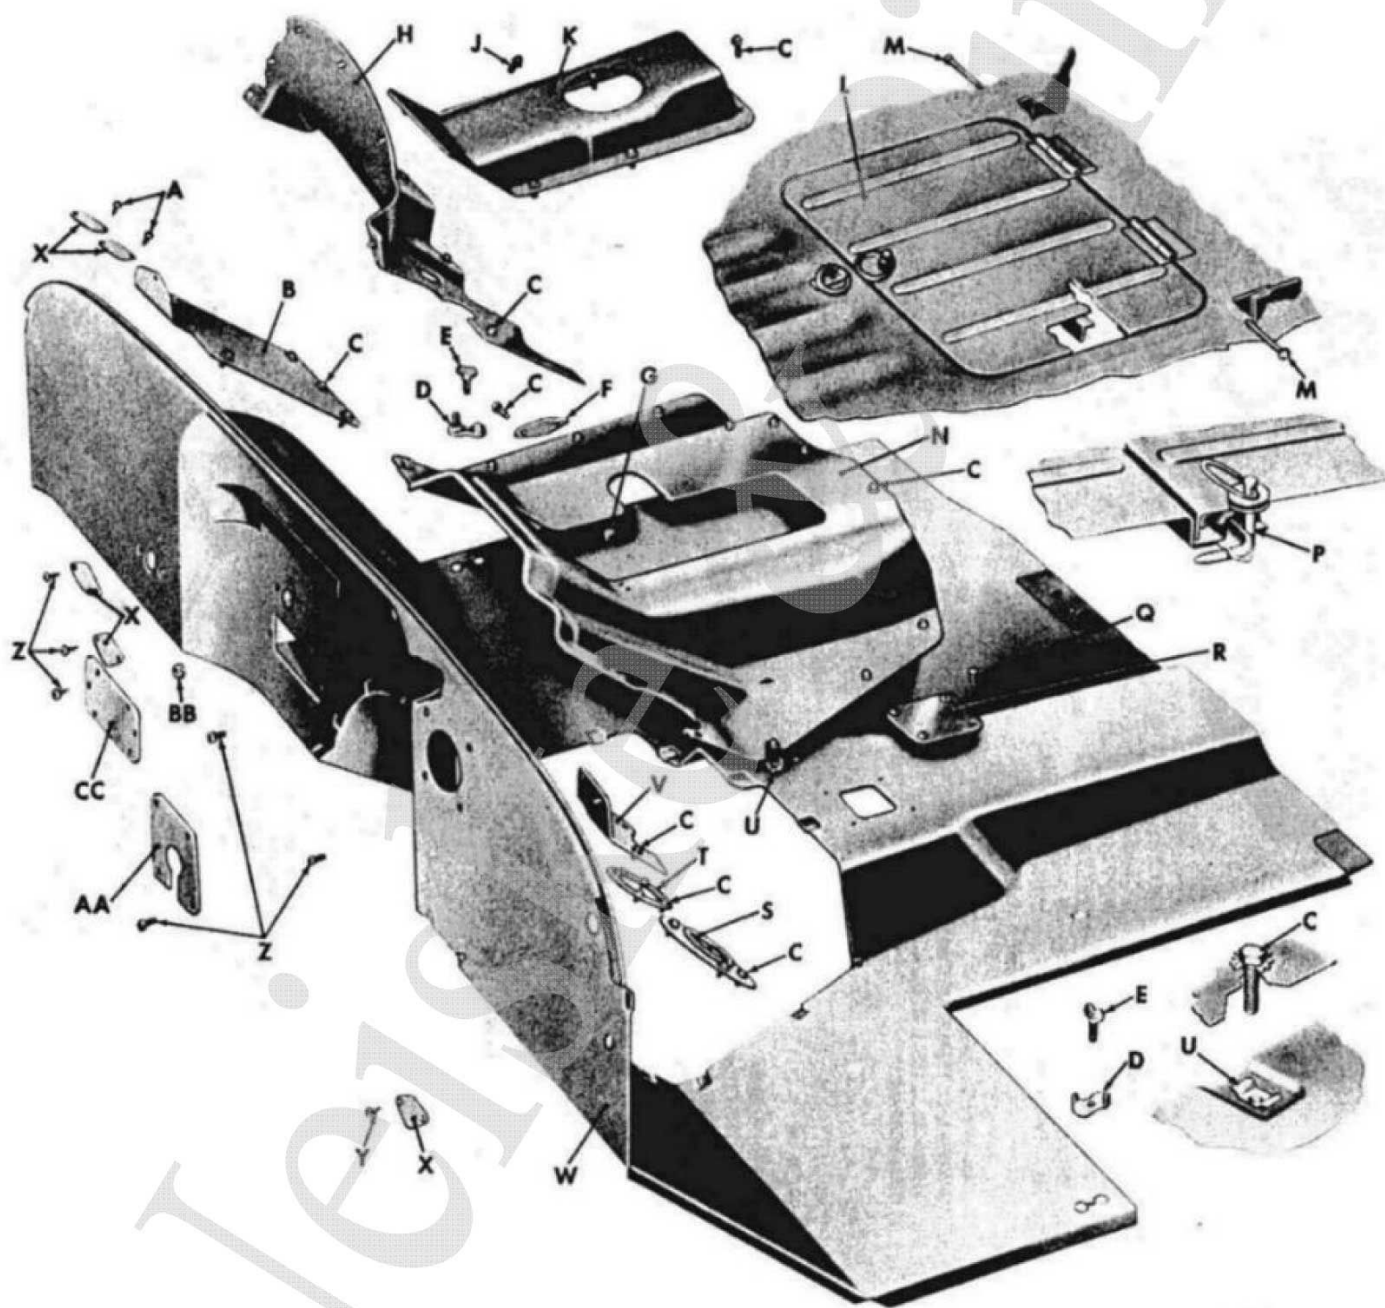 


Boden vorn / Floor plates

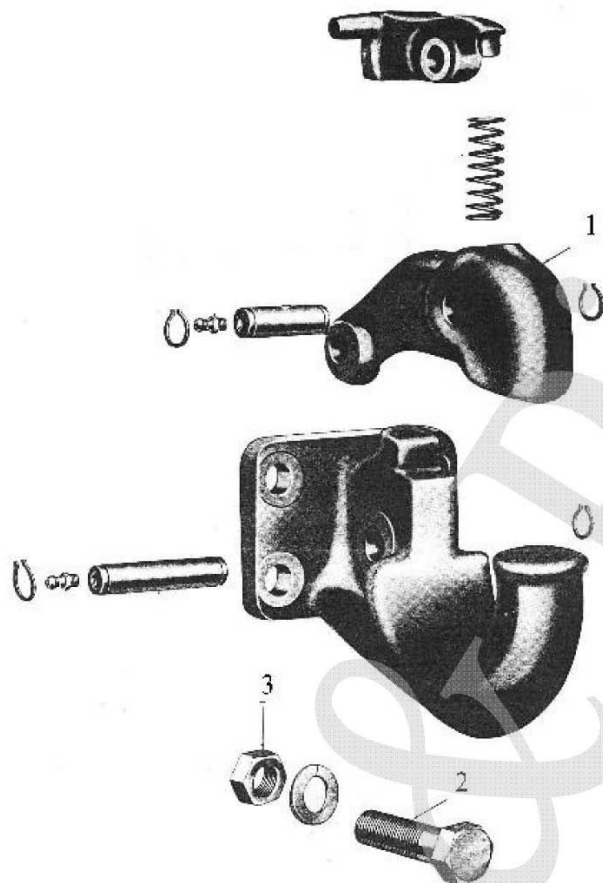 

Anhängerkupplung / Pintel hook

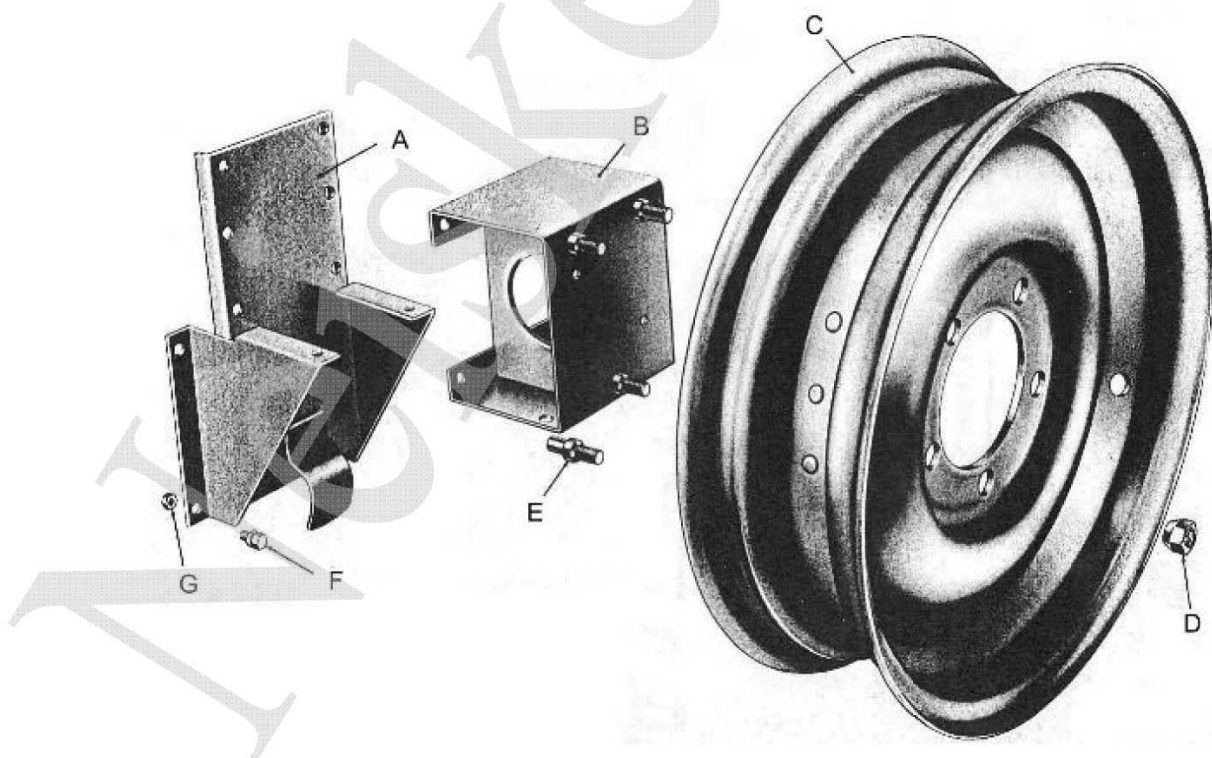 

Reserveradhalter / Spare wheel carrier

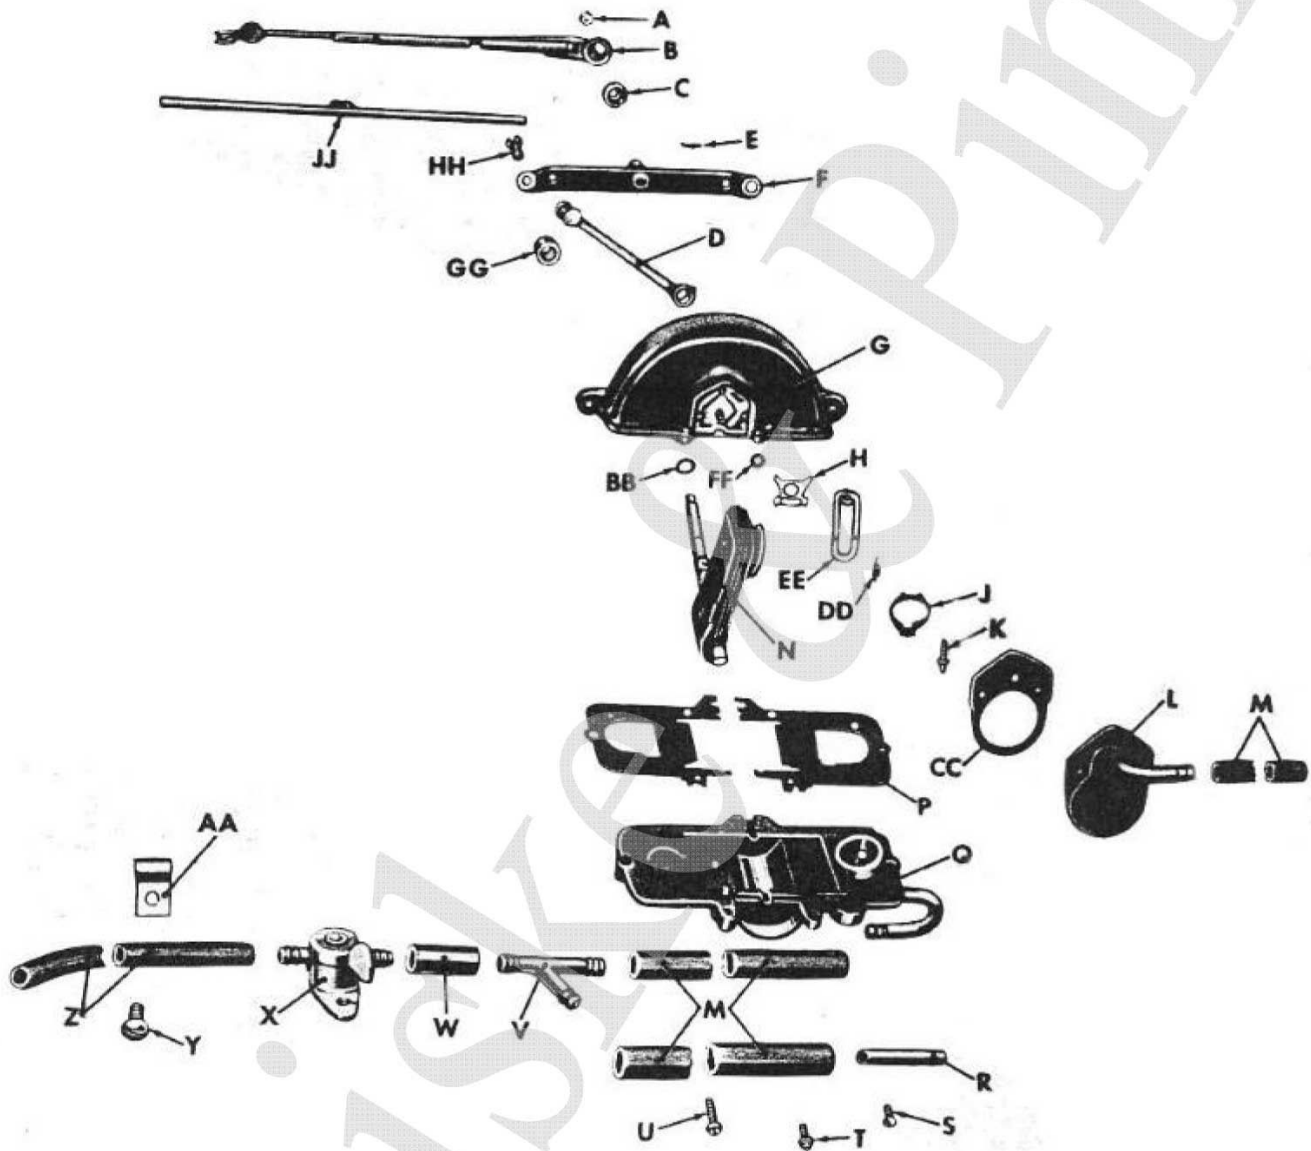 

Scheibenwischermotor / Windshield wiper motor